

# LCD Monitor

## User Manual

The color and the appearance may differ depending on the product, and the specifications are subject to change without prior notice to improve the performance.



# Table Of Contents

---

## MAJOR SAFETY PRECAUTIONS

Before You Start .....	1-1
Care and Maintenance .....	1-2
Cleaning the Monitor .....	1-3
Safety Precautions .....	1-4

## INSTALLING THE PRODUCT

Package Contents .....	2-1
Installing the Stand .....	2-2
Removing the Stand .....	2-3
Attaching a Wall Mount .....	2-4
Connecting to your Network .....	2-5
Connecting Power .....	2-6
Connecting to another Monitor .....	2-7
Connecting a SERIAL Cable .....	2-8
Connecting to your Printer .....	2-9
Connecting with a PC .....	2-10
Connecting a Stereo Cable .....	2-11
Connecting USB .....	2-12
Connecting Headphones .....	2-13
Connecting MIC .....	2-14
Kensington Lock .....	2-15

## USING THE PRODUCT

What is a network monitor? .....	3-1
Plug & Play .....	3-2
Standard Signal Mode Table .....	3-3
Installing the Device Driver .....	3-4
Product Operating Buttons .....	3-5
Using the Screen Adjustment Menu (OSD: On Screen Display) .....	3-6

## INSTALLING THE SOFTWARE

Using Windows Embedded Standard .....	4-1
Natural Color .....	4-2
MagicTune .....	4-3
MultiScreen .....	4-4

## TROUBLESHOOTING

Monitor Self-Diagnosis .....	5-1
Before Requesting Service .....	5-2
FAQ .....	5-3

## MORE INFORMATION

Specifications .....	6-1
Power Saving Function .....	6-2

---

**Contact SAMSUNG WORLDWIDE ..... 6-3**

**Correct Disposal of This Product**

**(Waste Electrical & Electronic Equipment) ..... 6-4**



# 1 Major Safety Precautions

---

## 1-1 Before You Start

---

### Icons used in this manual

ICON	NAME	MEANING
	Caution	Indicates cases where the function may not work or the setting may be canceled.
	Note	Indicates a hint or tip to operate a function.

### Using this Manual

- The contents of this manual are subject to change without prior notice for performance improvement.
- Make yourself fully aware of the safety precautions before using this product.
- If a problem occurs, refer to the 'Troubleshooting' section.

### Copyright Notice

**Copyright © 2011 Samsung Electronics Co., Ltd. All Rights Reserved.**

The copyright of this manual is reserved by Samsung Electronics, Co., Ltd.

The contents of this manual may not be partially or in whole reproduced, distributed or used in any form without the written permission of Samsung Electronics, Co., Ltd.

The SAMSUNG logo and SyncMaster are the registered trademarks of Samsung Electronics, Co., Ltd.

Microsoft, Windows and Windows NT are the registered trademarks of Microsoft Corporation.

VESA, DPM and DDC are the registered trademarks of the Video Electronics Standard Association.

All other trademarks mentioned herein belong to their respective companies.


## 1-2 Care and Maintenance


---

### External Surface and Screen Maintenance

Clean the product with a soft, damp cloth.

- Do not clean the product with an inflammable substance such as benzene or thinner or with a wet cloth. This may result in a problem with the product.
- Do not scratch the screen with your fingernails or a sharp object.  
This may result in scratches or damage to the product.
- Do not clean the product directly by spraying water onto the product.  
If water enters the product, it may result in fire, electric shock or a problem with the product.
- A white stain may be generated on the surface of the high-glossy model due to the inherent characteristics of the material, if a supersonic humidifier is used.

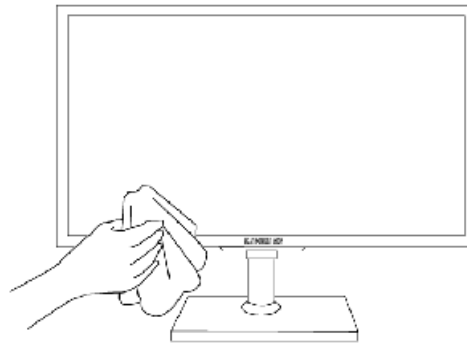

 The appearance and the color may differ depending on the model.


### About persistent images

- Displaying a still image for a long time may create a persistent image or stain on the screen. If you do not use the product for a long time, set the power-saving mode or screen saver.
- Due to technological constraints of the LCD Panel manufacturer, the images generated by this product may appear either brighter or darker than normal by appr. 1ppm (parts per million) pixel.  
The number of sub-pixels of an LCD panel by size: The number of Sub-Pixels = Max. Horizontal Resolution x Max. Vertical Resolution x 3  
Example) If the maximum resolution is 1366 x 768, the number of sub-pixels is 1366 x 768 x 3 = 3,147,264.


## 1-3 Cleaning the Monitor

### Cleaning the Monitor

- The panel and exterior of the cutting-edge monitor scratch easily and require careful attention. Clean the monitor according to the following steps.

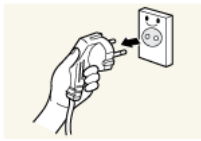

1. Power off the monitor and PC.
2. Disconnect the power cable from the monitor.

 To avoid electric shock, be sure you disconnect the cable by gripping the plug and do not touch the cable with wet hands.




3. Wipe the monitor screen using a clean, soft, dry cloth.




- Do not use a cleaning agent that contains surfactant, alcohol, or solvents. Otherwise, the exterior may discolor or crack or the panel coating may come off.



- Do not spray water or cleaning agent directly onto the monitor. Otherwise, the liquid may sink into the monitor and cause a fire, electric shock, or failure.

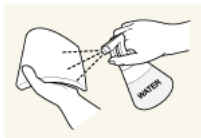


4. Clean the exterior of the monitor using a soft cloth dampened with a small amount of water.

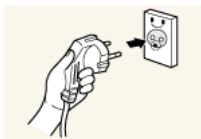

5. Connect the power cable to the monitor after you have finished cleaning.
6. Power on the monitor and PC.



### Precautions for Storage

- Using an ultrasonic humidifier may cause white stains on a highly glossy product.

 Be sure you contact the nearest service center (paid service) for cleaning the inside of the monitor.

## 1-4 Safety Precautions

### Icons used for safety precautions

ICON	NAME	MEANING
	Warning	Failing to follow the precautions marked with this sign, may result in a serious injury or even a fatality.
	Caution	Failing to follow the precautions marked with this sign, may result in a personal injury or property damage.

### Meaning of Signs



Do not perform.



Do not disassemble.



Do not touch.



Must be followed.



The power plug must be unplugged from the wall outlet.




Must be grounded to prevent electric shock.

### Power Related

 The following images are for your reference and may differ depending on models and countries.



#### Warning

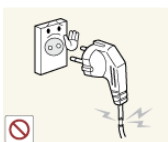


Avoid using a damaged power cord or plug or a loose power outlet.

- Otherwise, it may result in electric shock or fire.



Avoid plugging in or unplugging the power supply with wet hands.

- Otherwise, it may result in electric shock.

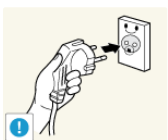

Make sure to connect the power cord to a grounded wall outlet (for insulation class 1 equipment only).

- Otherwise, it may result in electric shock or injury.




Keep the power cord and the product away from a heater.

- Otherwise, it may result in electric shock or fire.



Avoid connecting multiple electric appliances to a single wall outlet.

- Otherwise, it may result in fire due to overheating of the wall outlet.

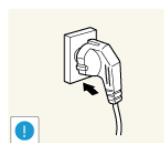

Plug the power plug in firmly.

- Otherwise, it may result in fire.



Avoid bending or twisting the power cord excessively and avoid placing heavy objects on the cord.


- Otherwise, it may result in electric shock or fire due to a damaged power cord.



If the pins of the power plug or the wall outlet are covered in dust, clean it using a dry cloth.


- Otherwise, it may result in fire.

## Caution

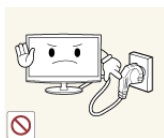

Avoid unplugging the power plug while the product is operating.

- Otherwise, it may damage the product due to electric shock.

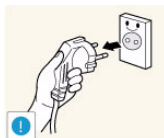


When unplugging the power plug from the wall outlet, make sure to hold it by the plug and not by the cord.

- Otherwise, it may result in electric shock or fire.



Make sure to use only the power cord supplied by Samsung. In addition, do not use the power cord of another electric appliance.

- Otherwise, it may result in electric shock or fire.

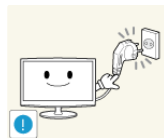

Connect the power plug to a wall outlet that can be easily reached.

- When a problem occurs with the product, you must unplug the power plug to cut the power off completely. You cannot cut the power off completely using only the power button on the product.

## Installation Related

### Warning



AVOID PLACING BURNING CANDLES, MOSQUITO-REPELLENT OR CIGARETTES ON THE PRODUCT AND INSTALLING THE PRODUCT NEAR A HEATER.

- Otherwise, it may result in fire.




Ask an installation engineer or relevant company to install the product onto a wall.

- Otherwise, it may result in injury.
- Make sure to use the specified wall mount.



Avoid installing the product in a badly-ventilated location such as inside a bookshelf or closet.

- Otherwise, it may result in fire due to internal over-heating.

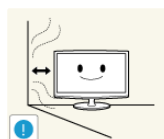

Keep a distance of at least 4 inches (10 cm ) from the wall when installing the product for ventilation.

- Otherwise, it may result in fire due to internal over-heating.



Keep the plastic bags used to pack the product away from children.

- If children place the plastic bags over their heads, they may suffocate.



Avoid installing the product in a location that is unstable or exposed to excessive vibrations such as on an unstable or slanted shelf.

- The product may fall and this may result in damage to the product or injury.
- If you use the product in a location exposed to excessive vibrations, it may result in a problem with the product or fire.



Avoid installing the product in a location exposed to dust, moisture (sauna), oil, smoke or water (rain drops) and installing it within a vehicle.

- This may result in electric shock or fire.



Avoid installing the product in a location exposed to direct sunlight or heat source such as a fire or heater.

- This may shorten the product life cycle or cause fire.



Avoid installing the product at a height where children may reach it.

- If a child touches the product, the product may fall and this may result in injury.
- Since the front part is heavier, install the product on a flat and stable surface.



## Caution



Do not let the product drop while moving it.

- This may result in a problem with the product or injury.




When installing the product on a console or shelf, make sure that the front of the product does not protrude out of the console or shelf.

- Otherwise, this may cause the product to fall off and result in a malfunction or injury.
- Make sure to use a cabinet or shelf suitable to the size of the product.



If the product is installed in a location where the operating conditions vary considerably, a serious quality problem may occur due to the surrounding environment. In this case, install the product only after consulting one of our service engineers about the matter.

- Places exposed to microscopic dust, chemicals, too high or low temperature, high humidity, such as airports or stations where the product is continuously used for a long time and so on.

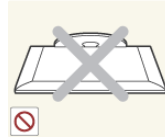

Do not place the product face down on the floor.

- This may damage the panel of the product.



When putting the product down, handle it gently.

- Otherwise, it may result in a problem with the product or injury.

## Usage Related



### Warning



Since a high voltage runs through the product, never disassemble, repair or modify the product yourself.

- Otherwise, it may result in fire or electric shock.
- If the product needs to be fixed, contact a service center.



When cleaning the product, do not spray water directly over the product parts.

- Make sure that water does not enter the product.
- Otherwise, it may result in fire, electric shock or a problem with the product.



If the product generates a strange noise, a burning smell, or smoke, unplug the power plug immediately and contact a service center.

- Otherwise, it may result in electric shock or fire.



Avoid letting children to hang or climb onto the product.

- Otherwise, it may result in the product falling and this may result in injury or death.




If you drop the product or the case is damaged, turn the power off and unplug the power cord. Contact a service center.

- Otherwise, it may result in fire or electric shock.




Avoid placing objects such as toys and cookies on top of the product.

- If a child hangs over the product to grab an object, the object or the product may fall and this may result in injury or even death.

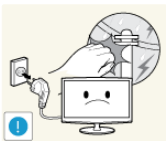

When thunder or lighting occurs, unplug the power cord and under no circumstance touch the antenna cable as this is dangerous.

- Otherwise, it may result in electric shock or fire.

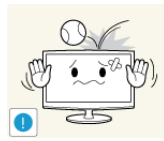

Avoid dropping an object over the product or cause impact to the product.

- Otherwise, it may result in electric shock or fire.




Avoid moving the product by pulling the power cord or antenna cable.

- Otherwise, it may result in electric shock, fire or a problem with the product due to damage to the cable.



When a gas leak occurs, do not touch the product or the power plug and ventilate immediately.

- A spark may result in an explosion or fire.
- During a thunder or lighting storm, do not touch the power cord or antenna cable.

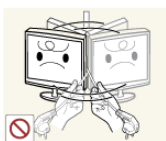

Avoid lifting up or move the product by holding only the power cord or signal cable.

- Otherwise, it may result in electric shock, fire or a problem with the product due to damage to the cable.



Avoid using or placing inflammable spray or objects near the product.

- This may result in an explosion or fire.



Take care not to block the vent by a table cloth or curtain.

- Otherwise, it may result in fire due to internal overheating.



Avoid inserting metal objects such as chopsticks, coins or hairpins, or inflammable objects into the product (the vents, ports, etc).

- If water or an alien substance enters the product, turn the power off, unplug the power cord and contact a service center.
- Otherwise, it may result in a problem with the product, electric shock or fire.



Avoid placing a liquid container such as a vase, flowerpot, beverage, cosmetics or drugs, or a metal object over the product.

- If water or an alien substance enters the product, turn the power off, unplug the power cord and contact a service center.
- Otherwise, it may result in a problem with the product, electric shock or fire.

## **Caution**




Displaying a still image for a long time may create a persistent image or stain on the screen.

- If you do not use the product for a long time, use the power-saving mode or set the screensaver to the moving picture mode.




Set the appropriate resolution and frequency for the product.

- Otherwise, it may result in eye strain.

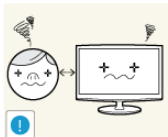

Watching the product from too close a distance continuously may damage your eyesight.

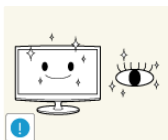

It is important to give your eyes some rest (5 minutes every hour) when viewing the product screen for long periods of time.

- This will alleviate any eye strain.




Keep small accessories away from the children.




Avoid placing a heavy object over the product.

- Otherwise, it may result in a problem with the product or injury.

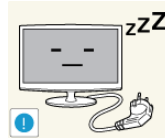

When not using the product for a long time such as leaving your home, unplug the power cord from the wall outlet.

- Otherwise, it may cause dust accumulation and result in fire caused by overheating or short circuit or result in an electric shock.

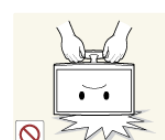

Avoid turning the product upside down or move the product holding only the stand.

- This may cause the product to fall resulting in damage to the product or injury.




Avoid using a humidifier or cooker near the product.

- Otherwise, it may result in electric shock or fire.



Since the display panel is hot after using it for a long time, do not touch the product.

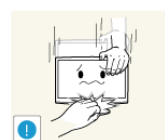

Take care when adjusting the angle of the product or the height of the stand.

- If your hand or finger is caught, you may be injured.
- If the product is tilted excessively, the product may fall and this may result in injury.

## Maintaining the Correct Posture when Using this Product




Maintain the correct posture when using this product.

- Straighten your back.
- Keep a distance of 45~50 cm(18~ 20inches) from your eyes to the screen. Look down at the screen and face the screen forwards.
- Maintain the correct posture when using this product.
- Adjust the angle of the product so that light is not reflected onto the screen.
- Keep your elbow at a right angle and keep your arm level with the back of your hand.
- Keep your elbow at a right angle.
- Place your heels flat on the ground while keeping your knees at an angle of 90 degrees or higher and maintain the position of your arm so that your arm is below your heart.











# 2 Installing the Product


## 2-1 Package Contents

- 
- If any items are missing, contact your dealer.
  - Contact a local dealer to purchase optional items.
  - Unpack the product and check if all of the following contents have been included.
  - Store the packaging box in case you need to move the Product at a later stage.



Monitor


CONTENTS			
			
Quick Setup Guide	Warranty Card (Not available in all locations)	User Manual	Power Cord
OPTIONAL PARTS			
			
Keyboard (USB)	Mouse (USB)	D-Sub Cable	Stereo Cable
			
Headphone	MIC		



The color and the appearance may differ depending on the product, and the specifications are subject to change without prior notice to improve the performance.

## 2-2 Installing the Stand

 Before assembling the product, place the product down on a flat and stable surface so that the screen is facing downwards.

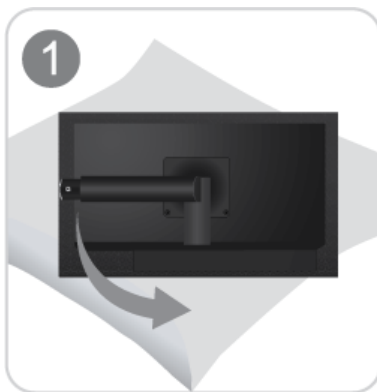

Place a soft cloth over the table to protect the product and place the product onto the cloth so that the front of the product is facing downwards.

 Do not remove the stopper pin before installing the base.



Hold the main body of the product with your hand as shown by the figure.



Insert the stand base into the stand connection part in the direction shown in the figure.



Turn the connecting screw at the bottom of the stand fully so that it is completely fixed.



After the installation of the base, stand the monitor up as shown in the figure. Now you can remove the stopper pin to adjust the stand.



- Caution


Avoid lifting the product holding only the stand.

- The colour and the appearance may differ depending on the product, and the specifications are subject to change without prior notice to improve the performance.
- Disassembly is in the reverse order of assembly.


## 2-3 Removing the Stand


---

 Before installation, disassemble the product according to the following steps.

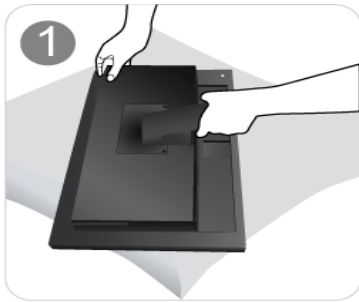


Lift up the monitor stand to the maximum angle with your left hand, and remove the back decoration cover with your right hand, as shown in the figure.

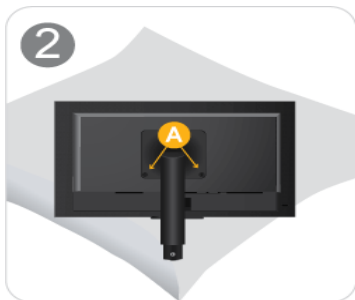


Remove the two screws(A).

 The stand can be detached after removing the screws.

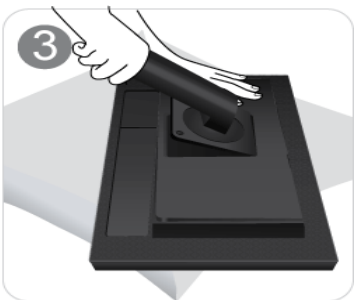

Remove the stand arm in the direction shown in the figure.

 The colour and the appearance may differ depending on the product, and the specifications are subject to change without prior notice to improve the performance.



## 2-4 Attaching a Wall Mount

This product provides a wall mount of 100 mm x 100 mm / 3.94 inches x 3.94 inches that complies with the VESA specifications.



100 mm x 100 mm / 3.94 inches x 3.94 inches

**A** Wall Mount Base


**B** Wall Mount Kit (Optional)

1. Turn the product off and unplug the power cord from the wall outlet.
2. Place a soft cloth or cushion on a flat surface to protect the panel and place the product face down.
3. Separate the stand.
4. Align the groove of the Monitor's wall mount base with the groove in the wall mount kit and firmly fix the wall mount kit by fastening the screws.

- ! If you use a screw that is longer than the standard specifications, the inside of the product may be damaged.
- For wall mounts that are not compatible with the standard VESA specifications, the length of the screw may differ depending on the corresponding specifications.
- Do not use screws that are incompatible with the standard VESA specifications and do not assemble them using excessive force.
- This may result in damage to the product or injury due to the product falling. Samsung shall not be held liable for any damage or injury.
- Samsung shall not be held liable for any damage to the product or injury caused by using a stand that is not compatible with the specified specifications or due to an installation not performed by an authorized installation engineer.
- When installing the product using a wall mount, purchase a wall mount that provides at least 4 inches (10 cm) of space from the wall.
- Samsung shall not be held liable for any problems caused by using a stand that is not compatible with the specified specifications.
- Use a wall mount according to specifications of your country.

## 2-5 Connecting to your Network


---

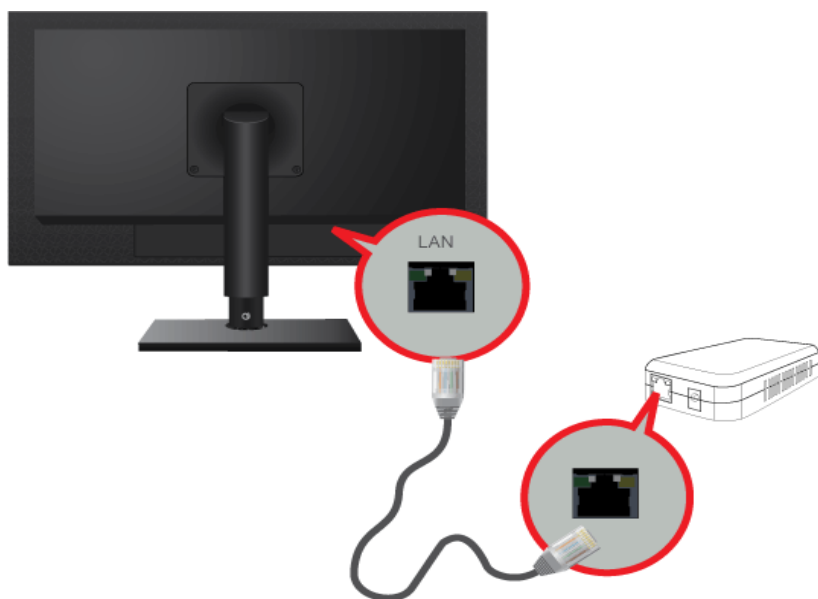

- The connecting part may differ depending on the product model.
- Connect between the [LAN] port on the product and your network using a LAN cable.

## 2-6 Connecting Power

---

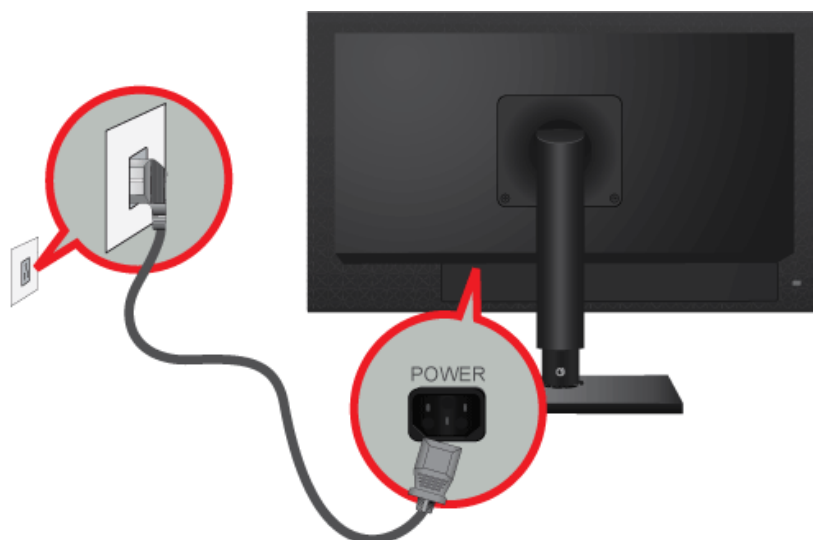


- To use the product, connect the power cable to a power outlet and the [POWER] port on the product.  
(The input voltage is switched automatically.)

 When the product is connected to a PC, you can turn the product on and use it.

## 2-7 Connecting to another Monitor


---

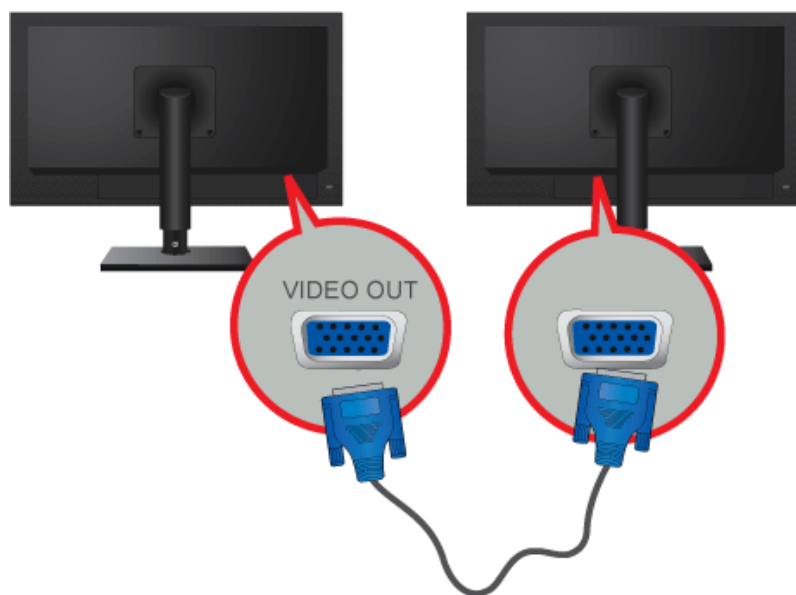

- Connect between the [VIDEO OUT] port on the product and the D-Sub port on your monitor using a D-Sub cable.
- 🔧 Connect to the [VIDEO OUT] port to display the same picture on another monitor.  
(For presentation purposes)

## 2-8 Connecting a SERIAL Cable

---

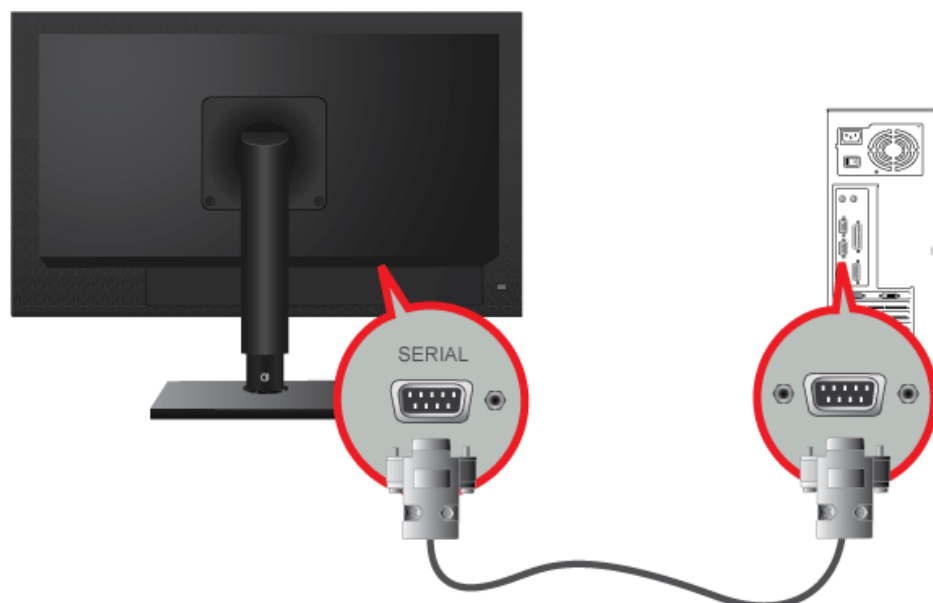


- Devices which support RS-232C connection (interface) can be connected.

 The connecting part may differ depending on the product model.

## 2-9 Connecting to your Printer

---

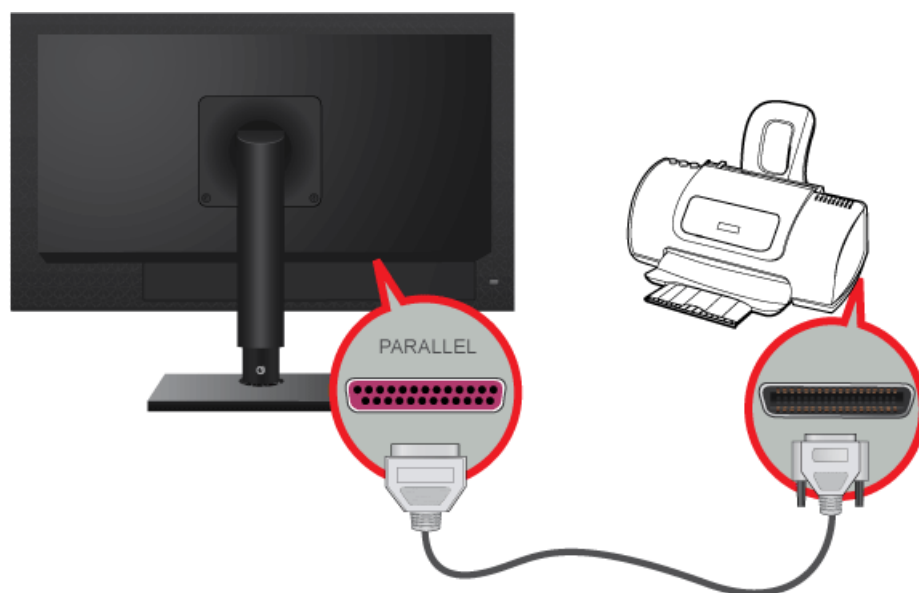


- Devices which support D-SUB 25-pin connection (interface) can be connected.

 The connecting part may differ depending on the product model.

## 2-10 Connecting with a PC


---

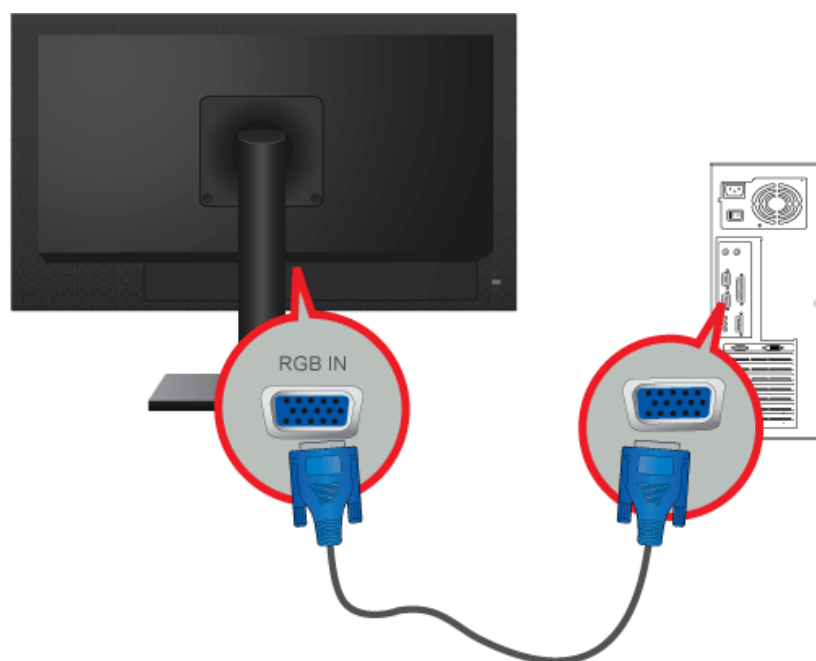

- Connect the [RGB IN] port of the product to the [D-Sub] port of your PC with a D-Sub cable.
- The connecting part may differ depending on the product model.
- Use the [RGB IN] port to directly connect the monitor to a PC.

## 2-11 Connecting a Stereo Cable

---

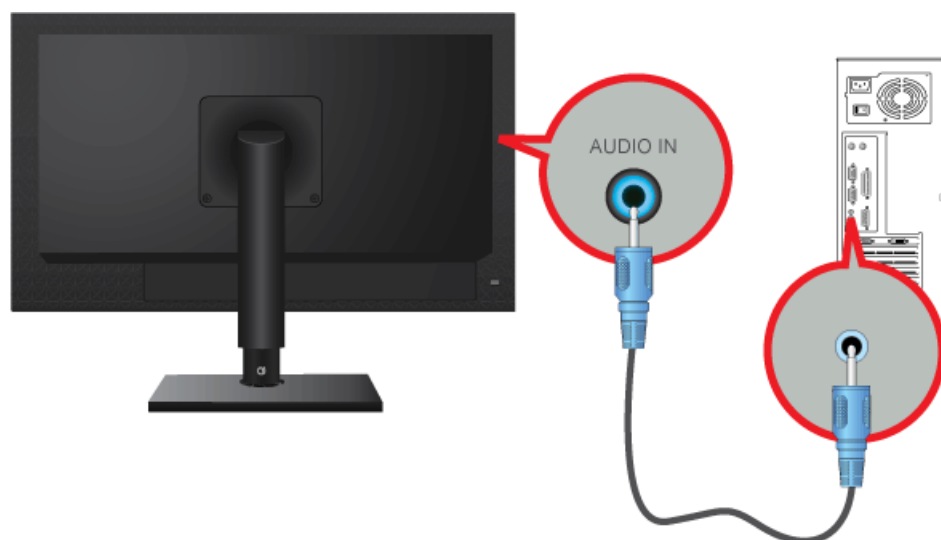


- Connect the [AUDIO IN] port on the rear side of the monitor to the sound card of the PC.




 The connecting part may differ depending on the product model.



## 2-12 Connecting USB

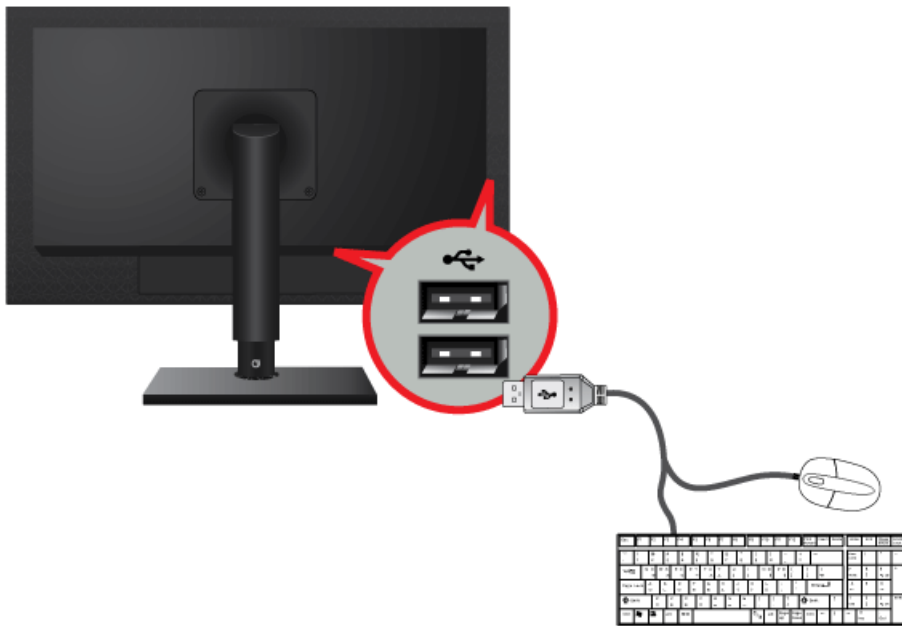
---




- The  USB port of the monitor supports Full-Speed Certified USB 2.0.
  - Connect USB devices such as a mouse, keyboard and external storage devices (DSC (Digital Still Camera), MP3, external storage, etc.).
-  • The connecting part may differ depending on the product model.
- You can use a USB device such as a mouse, keyboard, Memory Stick, or external hard disk drive by connecting them to the  USB port of the monitor without connecting them to the PC.

## 2-13 Connecting Headphones


---

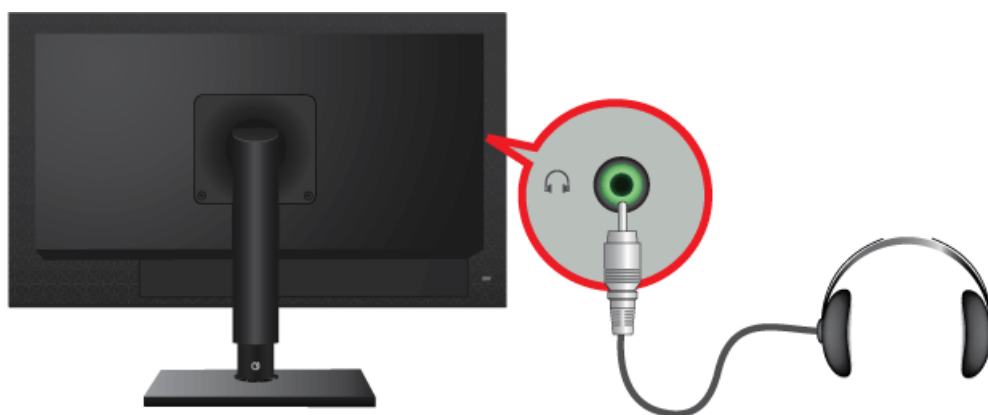

- Connect your headphones to the Headphone connection terminal.
-  • The connecting part may differ depending on the product model.
- You may connect your headphones to the monitor.

## 2-14 Connecting MIC

---

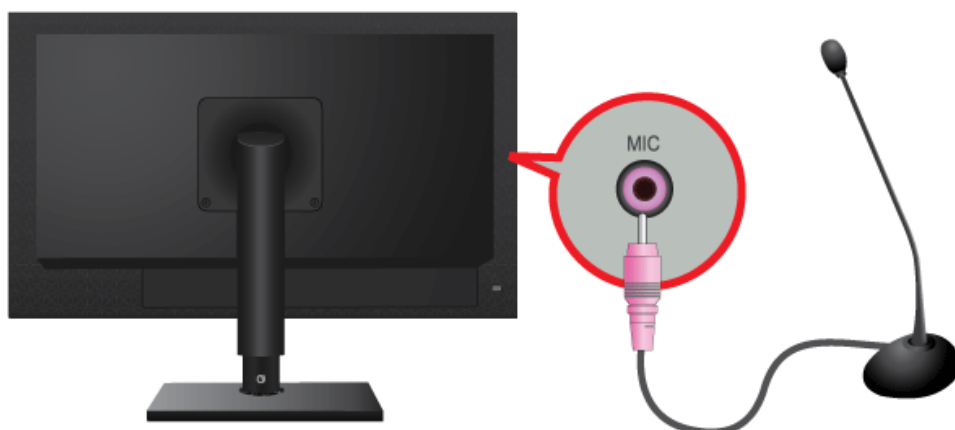

- Connect the microphone cable to the MIC port on the monitor.

 You may connect your microphone to the monitor.

## 2-15 Kensington Lock

A Kensington Lock is an anti-theft device that enables users to lock the product so that they can safely use it in public locations. Since the shape and usage of the locking device may differ depending on the model and the manufacturer, refer to the User Manual supplied with the locking device for more information.



**To lock the product, follow these steps:**


1. Wrap the Kensington lock cable around a large, stationary object such as a desk or chair.
  2. Slide the end of the cable with the lock attached through the looped end of the Kensington lock cable.
  3. Insert the locking device into the Kensington slot on the Monitor ( **B** ).
  4. Lock the lock ( **A** ).
- These are general instructions. For exact instructions, see the User Manual supplied with the locking device.
  - You can purchase the locking device from an electronics store, an online shop, or our service center.

## 3 Using the product

---

### 3-1 What is a network monitor?

---

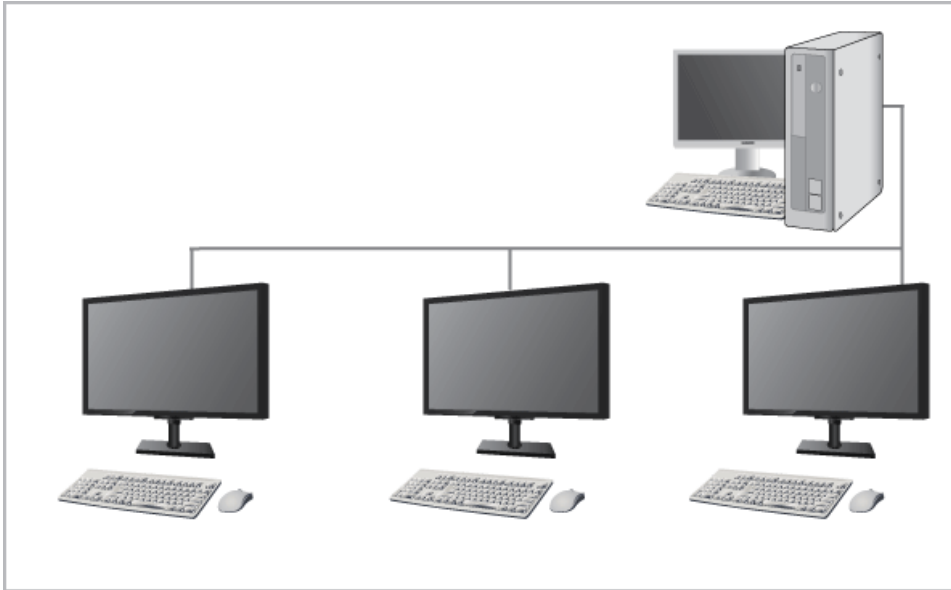


- A network monitor can be used for the same purposes as a regular monitor. It also provides the functionalities of most computers, such as an Internet connection, creating documents, editing images, via a connection to the host PC over the LAN. In addition, it allows you to connect an external device (DSC, MP3, external storage media) to the USB port and play music, movies and games.
- You also can share the screen being displayed on your network monitor with other users by connecting a projector or other display device to its VGA OUT port. You can use this functionality for video conferencing and a variety of shared tasks.
- In addition, because Windows XP is installed on your network monitor, you can perform Internet searches and USB memory searches independently of your host PC.

## 3-2 Plug & Play

---

If you turn the power on after purchasing the product, a message regarding the optimal resolution setting appears on the screen. Select a language and the optimal resolution.

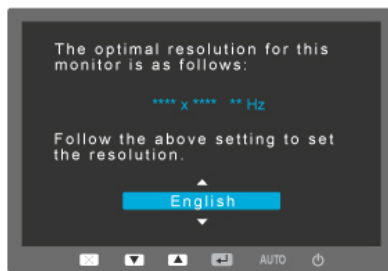

▲/▼ : You can select a language with these buttons.

MENU : If you press this button, the message disappears.

 To set the resolution to the optimal resolution.

- When the PC is turned off, connect the product and the PC and turn the power on.
- Right-click over the Desktop and select 'Properties' from the pop-up menu.
- In the 'Settings' tab, set the resolution to the optimal resolution.
- The message appears up to 3 times if the resolution has not been set to the optimal resolution.

### 3-3 Standard Signal Mode Table

-  The LCD monitor has one optimal resolution for the best visual quality depending on the screen size due to the inherent characteristics of the panel, unlike for a CDT monitor.

Therefore, the visual quality will be degraded if the optimal resolution is not set for the panel size. It is recommended setting the resolution to the optimal resolution of the product.

If the signal from the PC is one of the following standard signal modes, the screen is set automatically. However, if the signal from the PC is not one of the following signal modes, a blank screen may be displayed or only the Power LED may be turned on.

Therefore, configure it as follows, referring to the User Manual of the graphics card.

DISPLAY MODE	HORIZONTAL FREQUENCY (KHZ)	VERTICAL FREQUENCY (HZ)	PIXEL CLOCK (MHZ)	SYNC POLARITY (H/ V)
IBM, 640 x 350	31.469	70.086	25.175	+/-
IBM, 720 x 400	31.469	70.087	28.322	-/+
MAC, 640 x 480	35.000	66.667	30.240	-/-
MAC, 832 x 624	49.726	74.551	57.284	-/-
VESA, 640 x 480	31.469	59.940	25.175	-/-
VESA, 640 x 480	37.861	72.809	31.500	-/-
VESA, 640 x 480	37.500	75.000	31.500	-/-
VESA, 800 x 600	35.156	56.250	36.000	+/+
VESA, 800 x 600	37.879	60.317	40.000	+/+
VESA, 800 x 600	48.077	72.188	50.000	+/+
VESA, 800 x 600	46.875	75.000	49.500	+/+
VESA, 1024 x 768	48.363	60.004	65.000	-/-
VESA, 1024 x 768	56.476	70.069	75.000	-/-
VESA, 1024 x 768	60.023	75.029	78.750	+/+
VESA, 1366 x 768	47.712	59.790	85.500	+/+

#### Horizontal Frequency


The time taken to scan one line from the left-most position to the right-most position on the screen is called the horizontal cycle and the reciprocal of the horizontal cycle is called the horizontal frequency. The horizontal frequency is represented in kHz.

#### Vertical Frequency


A panel must display the same picture on the screen tens of times every second so that humans can see the picture. This frequency is called the vertical frequency. The vertical frequency is represented in Hz.

## 3-4 Installing the Device Driver

---

 If you install the device driver, you can set up the appropriate resolution and frequency for the product. The device driver is included on the CD-ROM supplied with the product. If the supplied drive file is corrupted, please visit the Samsung Electronics website(<http://www.samsung.com/>), and download the driver.

1. Insert the driver installation CD-ROM into the CD-ROM drive.
2. Click on "Windows Driver".
3. Complete the remaining installation steps according to the instructions displayed on the screen.
4. Select the model of your product from the model list.

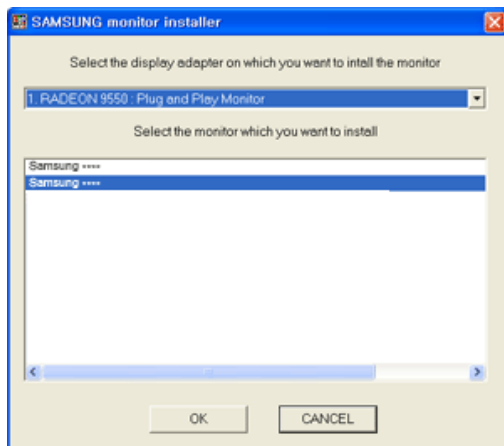


5. Check if the appropriate resolution and screen refresh rate are displayed in the Control Panel settings. For more information, refer to the document about the Windows operating system.





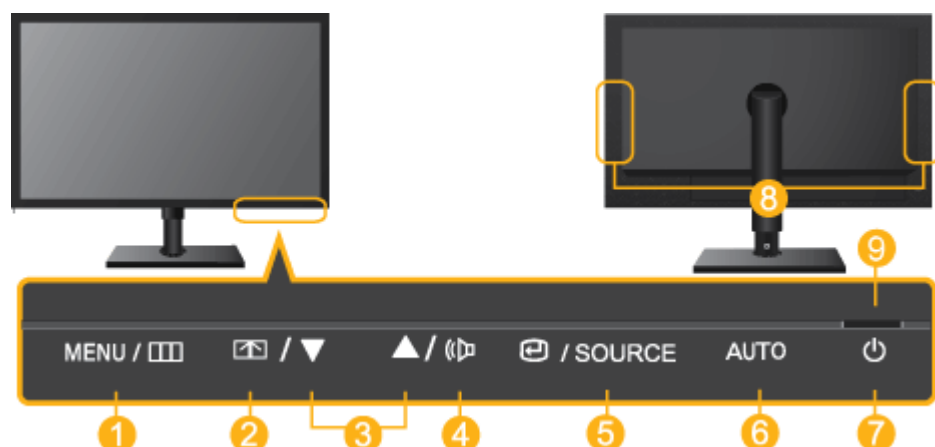


## 3-5 Product Operating Buttons

### Product Operating Buttons








 The buttons are located on the bottom of the product.

	Icon	Description
1	<b>MENU /</b> [Icon]	<p>Press this button to view the On Screen Display (OSD).</p> <p>This button is also used to exit the OSD or to return to a higher-level OSD menu</p> <p>* Key Lock Function</p> <p>Locks the buttons to maintain the current settings or to prevent setting changes by other users.</p> <p>On: If you press down on the [MENU] button for 5 seconds, the Key Lock function will be set to On.</p> <p>Off: If you press the [MENU] button for 5 seconds, the Key Lock function will be set to Off.</p>
2	[Icon]	<p>Users can set the Customized Key to one of the following functions. If the user presses the Customized Key[Icon] after setting it, the configured function will be performed.</p> <p>&lt;MagicBright&gt; - &lt;MagicColor&gt; - &lt;Color Effect&gt; - &lt;Image Size&gt;</p> <p> You can set the function of the &lt;Customized Key&gt; by selecting “&lt;SETUP&amp;RESET&gt; -&gt; &lt;Customized Key&gt;” in the OSD.</p>
3	▲/▼	<p>Adjust items in the menu.</p> <p>When OSD is not on the screen, press the button to adjust volume.</p>
4	[Icon]	<p>When OSD is not on the screen, push the button to adjust volume.</p>
5	[Icon] /SOURCE	<p>Use this button to select a function.</p> <p>Press [Icon] /SOURCE] to select the video signal from a connected device while the OSD is off. (When the [Icon] /SOURCE] button is pressed to change the input mode, a message appears in the upper left of the screen displaying the current mode).</p> <p> The sound can be adjusted only if the &lt;PC/AV Mode&gt; is under &lt;AV&gt; and the external input is connected with the HDMI or DVI.</p>

	Icon	Description
6	<b>AUTO</b>	<p>Press [AUTO] button to adjust the screen settings automatically.</p> <p>If the resolution settings are changed in the Display Properties, the &lt;AUTO Adjustment&gt; function is performed.</p> <p> This function is only available in &lt;Analog&gt; mode.</p>
7		Press this button to turn the product on or off.
8	<b>Speakers</b>	-
9	<b>Power LED</b>	<p>This LED is turned on when the product works normally.</p> <p> For more information on the power-saving function, refer to the power saving function in More Information. When not using the product for a long time, unplugging the power cord is recommended to minimize power consumption.</p>




### 3-6 Using the Screen Adjustment Menu (OSD: On Screen Display)



The Screen Adjustment Menu (OSD: On Screen Display) Structure


Top Menu	Sub Menus				
 PICTURE	Brightness	Contrast	Sharpness	MagicBright	Coarse
	Fine				
 COLOR	MagicColor	Red	Green	Blue	Color Tone
	Color Effect	Gamma			
 SIZE & POSITION	H-Position	V-Position	Image Size	Menu H-Position	Menu V-Position
 SETUP&RESET	Reset	Menu Transpar- ency	Language	Clock	Off Timer
	On Timer	On Timer Source	On Timer Volume	Display Time	Customized Key
 INFORMATION	-				






#### PICTURE

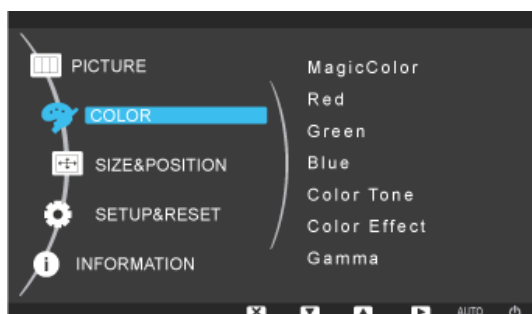

Menu	Description
Brightness	Controls the screen brightness.  This menu is unavailable when <MagicBright> is set to <Dynamic Contrast> mode.
Contrast	Controls the contrast of the pictures displayed on the screen  <ul style="list-style-type: none"><li>This menu is unavailable when &lt;MagicBright&gt; is set to &lt;Dynamic Contrast&gt; mode.</li><li>This menu is unavailable when &lt;MagicColor&gt; is set to &lt;Full&gt; mode or &lt;Intelligent&gt; mode.</li></ul>
Sharpness	Controls the clarity of details of pictures displayed on the screen  <ul style="list-style-type: none"><li>This menu is unavailable when &lt;MagicBright&gt; is set to &lt;Dynamic Contrast&gt; mode.</li><li>This menu is unavailable when &lt;MagicColor&gt; is set to &lt;Full&gt; mode or &lt;Intelligent&gt; mode.</li></ul>

Menu	Description
MagicBright	<p>Provides preset picture settings optimized for various user environments such as editing a document, surfing the Internet, playing games, watching sports or movies and so on.</p> <ul style="list-style-type: none"> <li>• &lt;Custom&gt; If the preset picture modes are not sufficient, you can configure the &lt;Brightness&gt; and &lt;Contrast&gt; directly using this mode.</li> <li>• &lt;Text&gt; This mode provides the picture setting appropriate for editing a document.</li> <li>• &lt;Internet&gt; This mode provides the picture setting appropriate for surfing the Internet (text + picture).</li> <li>• &lt;Game&gt; This mode provides the picture setting appropriate for playing games that include lots of graphics and that require a fast screen refresh rate.</li> <li>• &lt;Sport&gt; This mode provides the picture setting appropriate for watching sports games that include lots of movement.</li> <li>• &lt;Movie&gt; This mode provides brightness and sharpness settings similar to those of a TV for the best entertainment environment (movie, DVD, etc.).</li> <li>• &lt;Dynamic Contrast&gt; Controls the picture contrast automatically so that bright and dark pictures are balanced overall.</li> </ul>
Coarse	<p>Removes vertical noise lines (line pattern) from the screen.</p> <p>The location of the screen may be changed after the adjustment. In this case, move the screen so that the screen is displayed at the center of the display panel using the &lt;H-Position&gt; menu.</p> <p> This function is only available in &lt;Analog&gt; mode.</p>
Fine	<p>Removes horizontal noise lines (line pattern) from the screen.</p> <p>If you cannot remove the noise completely with the &lt;Fine&gt; function, adjust the &lt;Coarse&gt; and then use the &lt;Fine&gt; function again.</p> <p> This function is only available in &lt;Analog&gt; mode.</p>






Menu	Description
MagicColor	<p>Expresses natural colors more clearly without changing the picture quality by using proprietary digital picture quality improvement technology developed by Samsung Electronics.</p> <ul style="list-style-type: none"> <li>• &lt;Off&gt; - Turns the &lt;MagicColor&gt; function off.</li> <li>• &lt;Demo&gt; - You can compare the pictures processed by &lt;MagicColor&gt; with the original pictures.</li> <li>• &lt;Full&gt; - Provides a clearer picture including areas corresponding to skin color.</li> <li>• &lt;Intelligent&gt; - Improves the chroma of pictures except for areas corresponding to skin color.</li> </ul>
Red	<p>You can adjust the red color value according to your preference.</p> <p> This menu is unavailable when &lt;MagicColor&gt; is set to &lt;Full&gt; mode or &lt;Intelligent&gt; mode.</p>
Green	<p>You can adjust the green color value according to your preference.</p> <p> This menu is unavailable when &lt;MagicColor&gt; is set to &lt;Full&gt; mode or &lt;Intelligent&gt; mode.</p>
Blue	<p>You can adjust the blue color value according to your preference.</p> <p> This menu is unavailable when &lt;MagicColor&gt; is set to &lt;Full&gt; mode or &lt;Intelligent&gt; mode.</p>
Color Tone	<p>You can set the color temperature according to your preference.</p> <ul style="list-style-type: none"> <li>• &lt;Cool&gt; - Sets the color temperature of the screen to a cooler color.</li> <li>• &lt;Normal&gt; - Sets the color temperature of the screen to the standard color temperature.</li> <li>• &lt;Warm&gt; - Sets the color temperature of the screen to a warmer color.</li> <li>• &lt;Custom&gt; - Select this menu to set the color temperature manually.</li> </ul> <p>If you do not like the preset color temperatures, you can manually adjust the colors of &lt;Color Effect&gt;.</p> <p> This menu is unavailable when &lt;MagicColor&gt; is set to &lt;Full&gt; mode or &lt;Intelligent&gt; mode.</p>
Color Effect	<p>You can change the overall atmosphere by changing the color of pictures.</p> <ul style="list-style-type: none"> <li>• &lt;Off&gt; - Turns the color effect function off.</li> <li>• &lt;Grayscale&gt; - Displays pictures in black and white.</li> <li>• &lt;Green&gt; - Displays pictures in green monochrome color.</li> <li>• &lt;Aqua&gt; - Displays pictures in aqua monochrome color.</li> <li>• &lt;Sepia&gt; - Displays pictures in sepia monochrome color.</li> </ul> <p> This menu is unavailable when &lt;MagicColor&gt; is set to &lt;Full&gt; mode or &lt;Intelligent&gt; mode.</p>
Gamma	<p>Using this menu, you can change the intensity of the colors of medium brightness.</p> <ul style="list-style-type: none"> <li>• &lt;Mode1&gt; - &lt;Mode2&gt; - &lt;Mode3&gt;</li> </ul>


 <Color> feature is not available when <MagicBright> is set to <Dynamic Contrast> mode.

## SIZE & POSITION





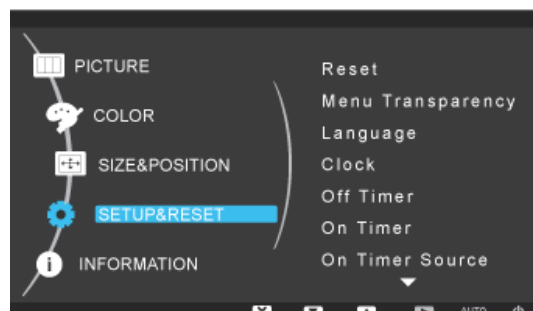


Menu	Description
H-Position	Moves the position of the display area on the screen horizontally.  This function is only available in <Analog> mode.
V-Position	Moves the position of the display area on the screen vertically.  This function is only available in <Analog> mode.
Image Size	<ul style="list-style-type: none"> <li>&lt;Auto&gt; - The picture is displayed at the aspect ratio of the input signal.</li> <li>&lt;Wide&gt; - The picture is displayed in full screen regardless of the aspect ratio of the input signal.</li> </ul>  <ul style="list-style-type: none"> <li>A signal not in the standard mode table is not supported.</li> <li>If the resolution is set to the optimal resolution, the aspect ratio does not change whether the &lt;Image Size&gt; is set to &lt;Auto&gt; or &lt;Wide&gt;.</li> </ul>
Menu H-Position	You can adjust the horizontal position of the OSD.
Menu V-Position	You can adjust the vertical position of the OSD.

## SETUP&RESET



Menu	Description
Reset	Use this function to restore the visual quality and color settings to the factory defaults. <ul style="list-style-type: none"> <li>&lt;No&gt; - &lt;Yes&gt;</li> </ul>
Menu Transparency	You can select the transparency of the OSD. <ul style="list-style-type: none"> <li>&lt;Off&gt; - &lt;On&gt;</li> </ul>

Menu	Description
Language	<p>Select a language for the OSD.</p> <ul style="list-style-type: none"> <li>English, Deutsch, Español, Français, Italiano, Svenska, Русский, Português, Türkçe, Polski, Magyar</li> </ul> <p> The selected language is only applied to the product OSD. This setting does not affect the other functions of the PC.</p>
Clock	Current Time Setting.
Off Timer	<p>Used to set the product so that it automatically turns off at a certain time.</p> <ul style="list-style-type: none"> <li>&lt;Off&gt; - &lt;On&gt;</li> </ul> <p> This menu is enabled if &lt;Clock&gt; is set.</p>
On Timer	<p>Used to set the product so that it automatically turns on at a certain time.</p> <ul style="list-style-type: none"> <li>&lt;Off&gt; - &lt;On&gt;</li> </ul> <p> This menu is enabled if &lt;Clock&gt; is set.</p>
On Timer Source	<p>Used to adjust the mode when the product is automatically turned on.</p> <ul style="list-style-type: none"> <li>&lt;Analog&gt; - &lt;Client&gt;</li> </ul> <p> This menu is enabled if &lt;On Timer&gt; is set.</p>
On Timer Volume	<p>Automatically adjusts the volume to a certain level when the product is turned on.</p> <p> This menu is enabled if &lt;On Timer&gt; is set.</p>
Display Time	<p>The OSD automatically disappears if no action is taken by the user.</p> <p>You can determine the time to wait before the OSD is hidden.</p> <ul style="list-style-type: none"> <li>&lt;5 sec&gt; - &lt;10 sec&gt; - &lt;20 sec&gt; - &lt;200 sec&gt;</li> </ul>
Customized Key	<p>You can set the function of the &lt;Customized Key&gt; to one of the following.</p> <ul style="list-style-type: none"> <li>&lt;MagicBright&gt; - &lt;MagicColor&gt; - &lt;Color Effect&gt; - &lt;Image Size&gt;</li> </ul>

## INFORMATION



Menu	Description
INFORMATION	Shows the frequency and resolution set on the PC.

# 4 Installing the Software

---

## 4-1 Using Windows Embedded Standard

---

### What is WES Client?

An Microsoft Windows Embedded Standard (WES) client uses the Microsoft Windows Embedded Standard operating system. When an WES client is connected to a Citrix ICA server or another server that can provide the Microsoft RDP service, data for the keyboard, mouse, audio/video and display are transmitted through the network between the client and the server.

#### Connectable Servers

- A Citrix ICA (Independent Computing Architecture) Server
  - A Microsoft Windows 2000/2003 Server where the terminal services and Citrix MetaFrame are installed
  - A Microsoft Windows NT 4.0 Server where the Citrix MetaFrame is installed
- A Microsoft RDP (Remote Desktop Protocol) Server
  - A Microsoft Windows 2000 Server where the terminal services are installed
  - A Microsoft Windows 2003 Server
  - A Microsoft Windows XP Professional



This manual describes the functions provided by the WES Client. However, it does not explain general functionalities of Windows Embedded Standard. For more general information on Windows Embedded Standard, refer to Windows Embedded Standard Help provided by Microsoft.

### Logon

When the client starts, you can logon to the server by entering your username and password. The default usernames already configured are 'Administrator' and 'MyUser', and their passwords are a space.

### Windows Embedded Standard Desktop

#### MyUser

When you log in, the User Desktop appears. The default icons that appear on the User Desktop are Citrix Xendesktop Online plug-in, Remote Desktop Connection, Internet Explorer, VMWare View Client, 2X Client. You can also run this connection from the Start menu. The audio volume icon, VNC server icon and system time are displayed on the User Taskbar.

When logged on as a user, there are many restrictions that protect the system from incorrect user actions. You cannot access the system drives and there are restrictions on configuring properties for them. To configure the client's advanced and detailed settings, log on as an administrator.

#### Administrator

If you logon as Administrator, the Administrator Desktop appears. The default icons that appear on the Administrator Desktop are My Computer, My Network Places, Citrix Xendesktop Online plug-in, Remote Desktop Connection, Internet Explorer, VMWare View Client, 2X Client and Recycle Bin. You can also run the Citrix Program Neighborhood, Remote Desktop Connection, and Internet Explorer from the Start menu. The audio volume icon, VNC server icon, Enhanced Write Filter status icon, and system time are displayed on the Administrator Taskbar. The Administrator privilege is required for adding and removing programs.

#### Log off, Restart, Shut down

- To log off the current session, shut down or restart your client, use the Start menu. [Click Start → Shut down]. The Shut Down Windows dialog box is displayed. Select an operation from the combo box and click OK. You can also log off or shut down your client using the Windows Security dialog box displayed when pressing the [Ctrl + Alt + Del] keys. If 'Force Auto Log on' is activated, you will be immediately logged on after each log off.



- The Client Log off, Restart and Shutdown take effect on the operations of the EWF(Enhanced Write Filter). To keep the changed system configuration, you must save a cache for the current system session into flash memory. Failing to do so will cause the changed configuration to be lost when the client is shutdown or restarted. (In the case of logging off, the configuration is remembered when login in again.) For more information on the Enhanced Write Filter, refer to the Program Help.

## Programs

### The Remote Desktop Connection

You can control a running terminal server or another computer (Windows 95 or later) remotely through a remote desktop connection.

#### • Remote Desktop


- Windows XP Professional or Windows 2000/2003 Server must be installed on the computer to be controlled remotely. This computer is called a host.
- A remote computer running on an operating system later than Windows 95 is required. This remote computer is called a client. The client software for the remote desktop connection must be installed on the client.
- You must also be connected to the Internet. A broadband Internet connection is good for high performance. However, because the remote desktop transmits a minimum set of data including the display data and keyboard data to control the host remotely, a broadband Internet connection is not required. You can run a remote desktop on a low bandwidth Internet connection.

 When running a remote desktop on Windows XP Professional, you cannot use the operating system of your computer.

#### • Enabling Your Computer as the Host

You must enable the Remote Desktop feature to control it from another computer. You must be logged on as an administrator or a member of the Administrators group to enable Remote Desktop on your computer. Follow these steps:

- Open the System folder in the Control Panel. Click Start, point to Settings, click Control Panel, and then double-click the System icon.
- On the Remote tab, select the “Allow users to connect remotely to this computer” checkbox.
- Ensure that you have the proper permissions to connect to your computer remotely, and click OK.
- Leave your computer running and connected to the client’s network with Internet access.

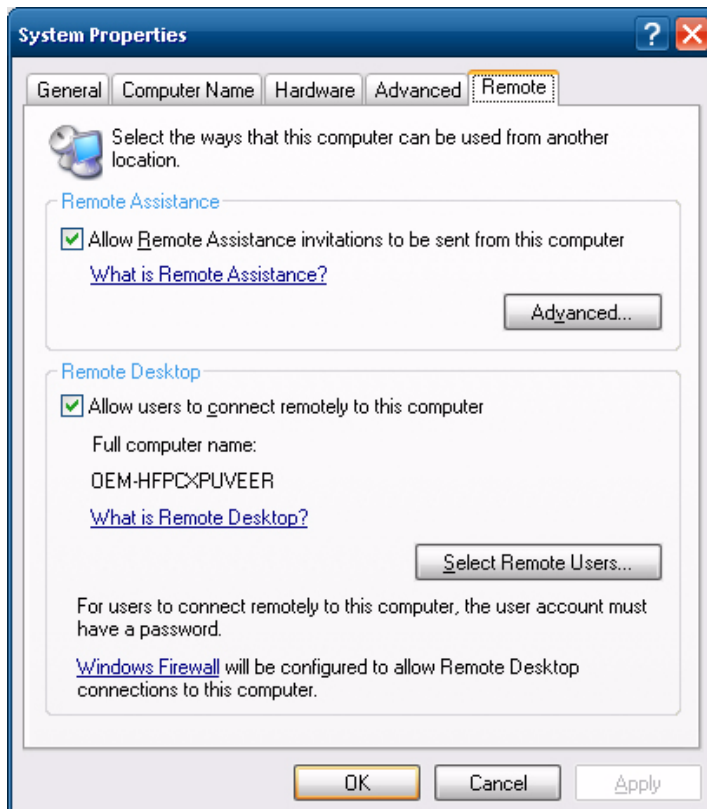

- **Start a Remote Desktop Session on the Client**

Once you have enabled your host computer to allow remote connections and installed the client software on a Windows-based client computer, you are ready to start a Remote Desktop session.

You must first establish a virtual private network connection or remote access service connection from your client computer to your host computer.


1. Click Start, and then click Remote Desktop Connection. Or double-click the Remote Desktop Connection icon. The Remote Desktop Connection window will open.
2. Enter the host computer name. You can configure detailed settings by clicking the Options button.




 The Help file is not available with this Monitor.

3. Options

- General : Enter the login information to connect to the host computer. Enter your username and password to login to the host automatically.

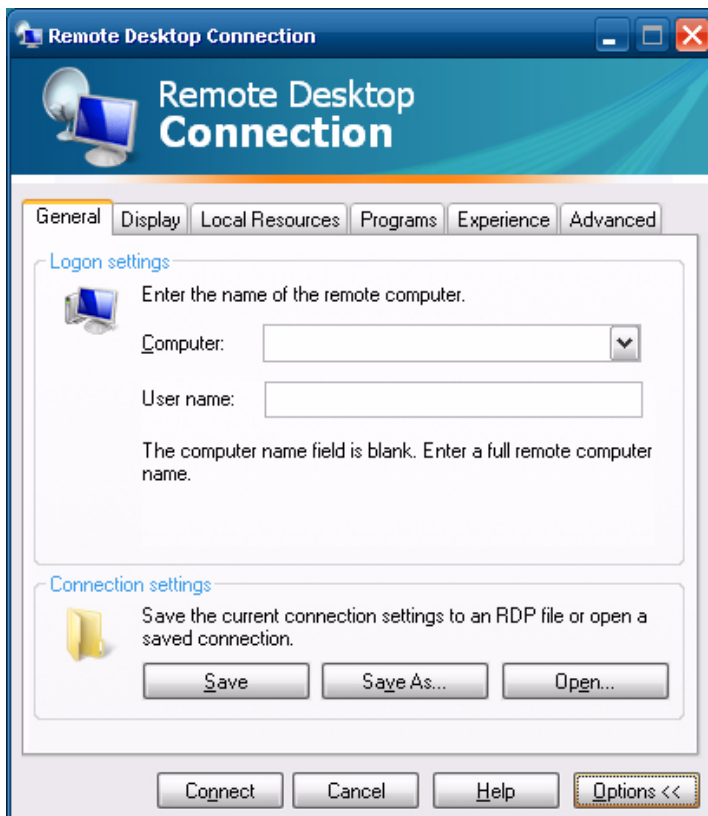


- Display : The Remote Desktop Connection sends and receives compressed screen data. If you set the resolution and color quality to the high option, the speed may become slow.

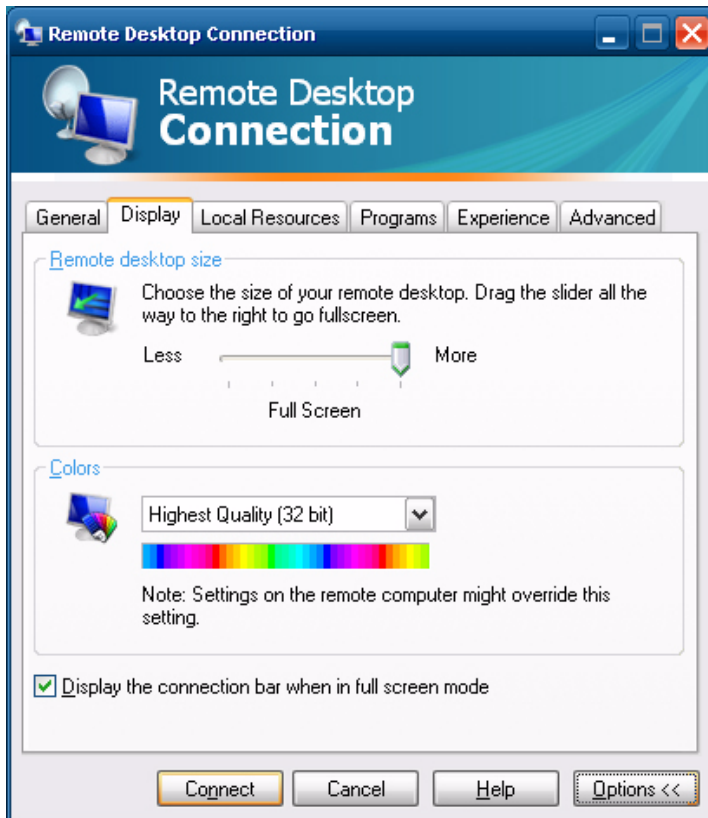


- Local Resource : Specify whether to use the hard disks and ports.



- Programs : Specify whether to display the Desktop or run an application whenever you are connected. The default is 'Desktop'.

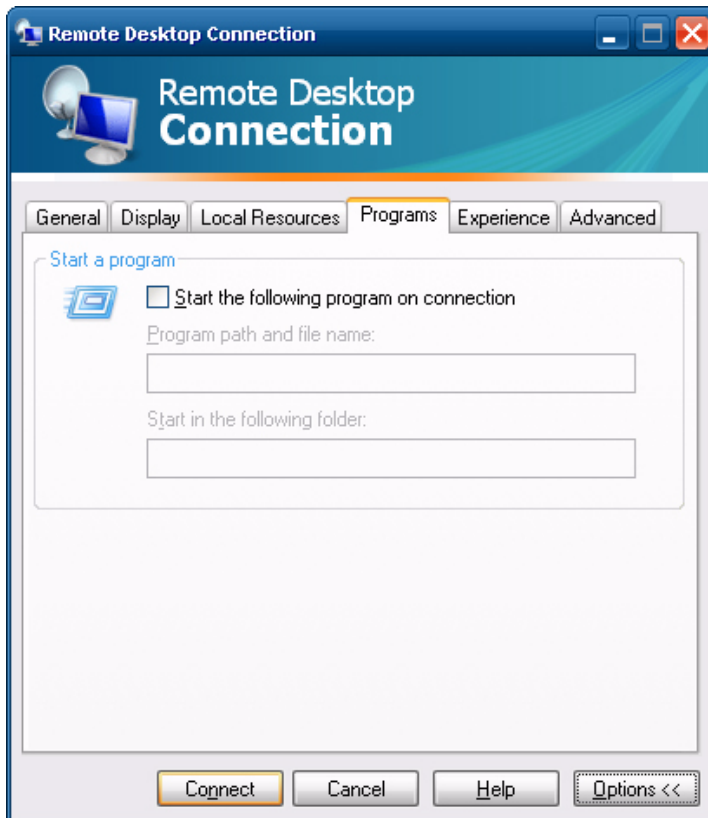

- Experience : You can select your connection speed, and select and share environmental options.

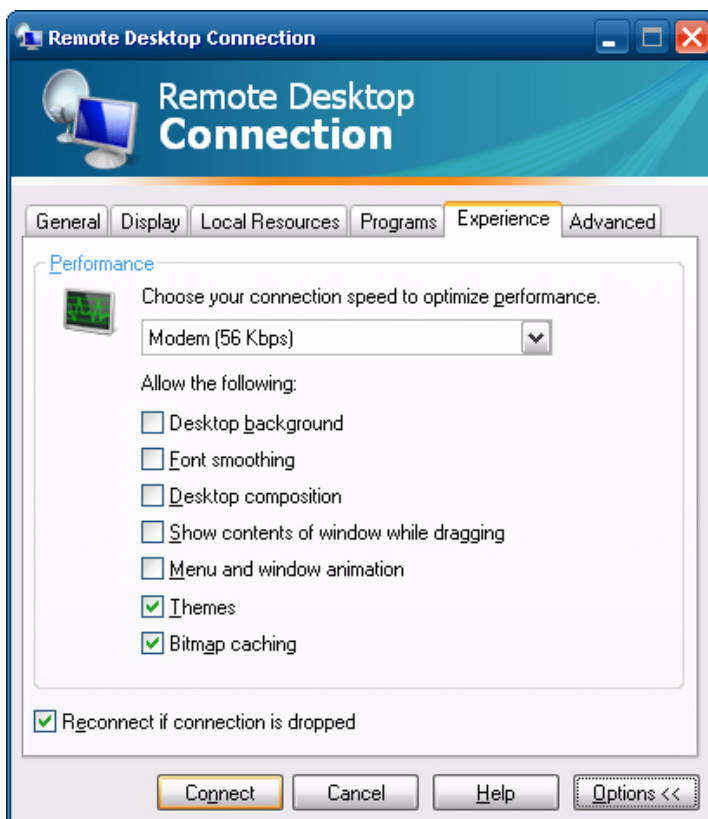

- Advanced : Protect your personal information for when your monitor is connected to a remote desktop.



4. Click Connect. The Log On to Windows dialog box appears.
5. In the “Log On to Windows” dialog box, type your username, password, and domain (if required), and then click OK. The Remote Desktop window will open and you will see the desktop settings, files, and programs that are on the host computer.

 For more information on Remote Desktop Connections, visit the Microsoft web site.


## RealVNC Server

RealVNC (Virtual Network Computing) is a software program that allows you to connect to another computer on a network and control it remotely. Compared to the Windows terminal service which has a similar function, RealVNC allows only one administrator to connect to the server at a time. That is, if another is connected to the server as an administrator, the previous administrator connection will be disconnected.

In RealVNC, the server and the viewer communicate via the VNC protocol. You must install a RealVNC server on the computer you wish to control remotely, and a VNC viewer on the computer which remotely controls the computer where the RealVNC server is installed. Hence, the RealVNC server program is installed on a WES client.

By using this program, you do not have to move directly to the client site to resolve its problems. Instead, you can connect to the client from the server and solve problems remotely. For this reason, RealVNC is being used.

Only administrators can configure the RealVNC server properties. To display the configuration dialog box for RealVNC, double-click the RealVNC icon in the system tray. From this dialog box, you can run a VNC server and configure a password and various properties. The default password is set to ‘Administrator’. Note that it is case-sensitive.

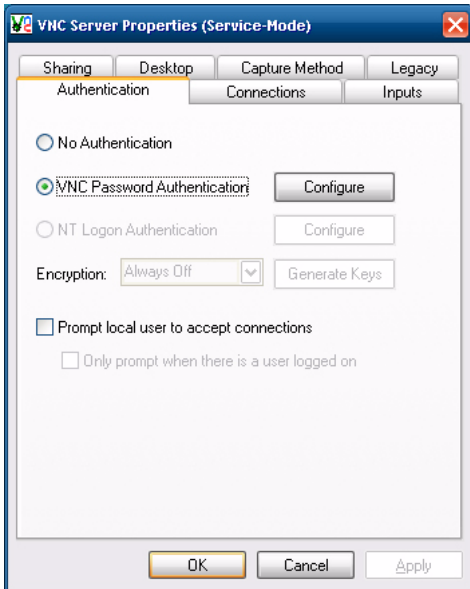


### Internet Explorer

A WES Client includes Internet Explorer. This program is permitted for all users. For more information on Internet Explorer, visit the Microsoft website.

### Enhanced Write Filter

Enhanced Write Filter (EWF) protects a flash volume from write access and consequently, preserves the durability of the flash device. EWF provides read and write access through a cache to the client instead of allowing direct access to a flash volume.

If EWF is activated, data is not stored to the flash. The data stored in the cache is only effective while the client is operating. The cached data will be lost when restarting or shutting down your client. Therefore, to store the data written to the registry, favorites and cookie folders, etc., the content stored in the cache should be transferred to the flash. An error message is displayed when it is not possible to write to the cache due to a lack of memory. If this message is displayed, you have to deactivate EWF to flush the EWF cache. The user can double-click the EWF icon on the tray at the bottom right of the screen to call the EWF Manager. A user can also change the EWF configuration by entering EWF management commands at the command prompt. This task requires the administrator privilege.

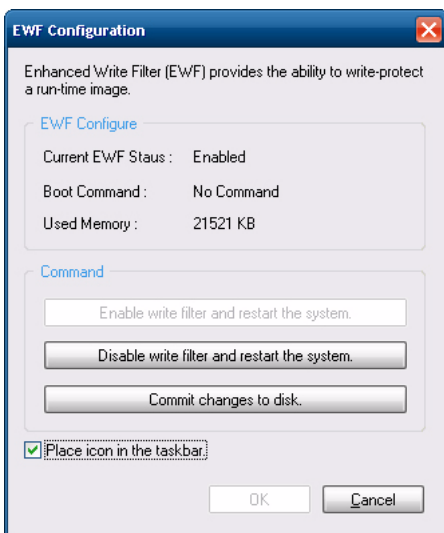

- **Enable disk write protection and restart your computer**

If the EWF is disabled, enable it. If this item is selected, the cache is flushed and the EWF is enabled. After restarting your computer, the configurations and file system information for the client are written to a cache. You can also perform this operation by entering "ewfmgr.exe c: -enable" at the command prompt and restarting your computer.

- **Disable disk write protection and restart your computer**

This item is activated when the EWF is running. If this item is selected, the current states of the client (saved in a cache) are saved to a flash volume and the EWF is disabled. After restarting your computer, the configurations and file system

information for the client are written to a flash volume. You can also perform this operation by entering “ewfmgr.exe c: -commitanddisable” at the command prompt and restarting your computer.

- **Write the changes to a disk**

This item is activated when the EWF is running. If this item is selected, the current states of the client (saved in a cache) are saved to a flash volume. However, the state of EWF will not be changed. You can also perform this operation by entering “ewfmgr.exe c: -commit” at the command prompt.


 You can view the configurations for the protected volumes by entering “ewfmgr.exe c:” at the command prompt.

### File-Based Write Filter (FBWF)

The File-Based Write Filter (FBWF) protects the memory of the client from being overwritten by any unauthorized user. By restricting excessive writing into the memory, the FBWF allows you to use the client for a long time. If you request I/O, the FBWF has the client perform its operations using the cache instead of the memory so that the memory can be protected.

The data saved in the cache is preserved while the client operates normally. It is removed when it is restarted or exited. To save the changes, you should write the relevant file onto the disk using the commit command. If you don't know which file is changed, disable the FBWF, change it, and enable it again.

You can control the FBWF using the various options of the fbwfmgr command at a command prompt.

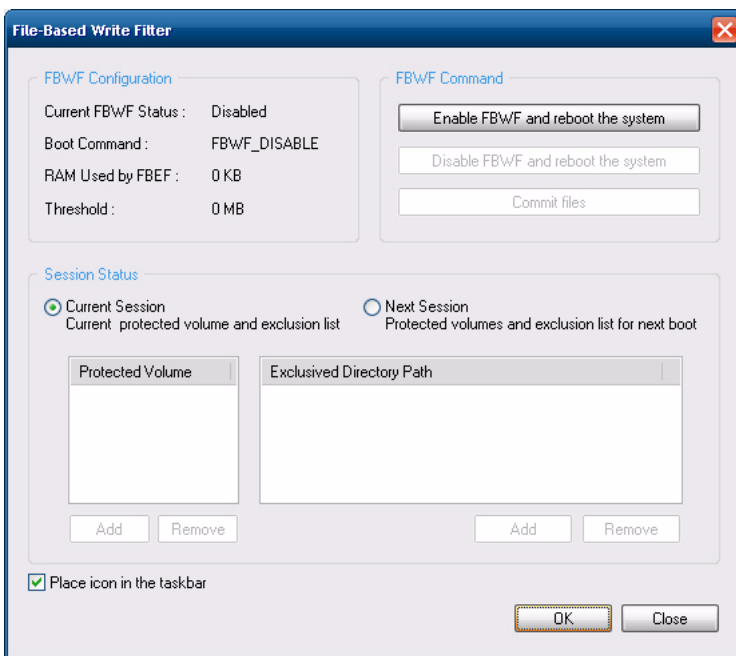

- **Setting the FBWF**

- Current FBWF status : Displays the current status of the FBWF (Enabled or Disabled).
- Boot command : Displays the FBWF command that will be performed at the next boot-up.
- Used memory : Displays the size of the RAM the FBWF is using. If the current status is set to "Disabled", the used memory is displayed as 0 KB.
- Maximum memory: Displays the maximum size of the RAM that the FBWF can use.

- **FBWF Command**

- Enable the FBWF and restart the system : Enables the disabled FBWF and restarts the client. If the client is not restarted, only the boot command is changed to BWF\_ENABLE and the current status is not changed.
- Disable the FBWF and restart the system : Disables the enabled FBWF and restarts the client. If the client is not restarted, only the boot command is changed to FBWF\_DISABLE and the current status is not changed.
- Write the changes to the disk : Even if the disks are protected by the FBWF, you can add or delete the files you want to save on them. To write the changes onto the disk, click the [Write the changes to the disk] button.

- **Session Status**

- Current session : Displays the volumes being protected by the FBWF and a list of the folders and files on those volumes that are excepted from protection by the FBWF.
- Next session : Select the volumes that will be protected by the FBWF when the client is booted up next time. Also,



select the folders and files that you want to except from protection by the FBWF.

## Windows Media Player

The WES Client includes Windows Media Player 6.4. With Windows Media Player, you can play audio and video files on a website.

## Control Panel

### The Windows Firewall

The Windows Firewall protects your client further. The Windows Firewall allows you to restrict incoming data to your client from other computers, thus helping to control your client data more effectively. In addition, it also provides a barrier between your client and network connections reducing unauthorized access, viruses, and worms across networks.

You can think of a firewall as a sentinel which identifies incoming data from the Internet and other networks. According to the firewall settings, incoming data to your computer is either permitted or rejected.

The Windows Firewall is, by default, installed and activated on your client. However, your administrator can turn it off. You can choose and select a different firewall. Therefore, it is not required for you to use the Windows Firewall. Estimate the functions of other firewalls and choose the best one to fit your requirements. To install and run a different firewall, you must turn off the Windows Firewall.

You must be logged on as administrator to turn the Windows Firewall on or off. Follow these steps to turn the Windows Firewall on or off.

1. Run the Windows Firewall.
2. Click on one of these options under the General tab.
  - **On (recommended)** : This is the recommended setting for normal use.
  - **On with no exceptions** : This settings blocks all unwanted access to your client, including all requests to programs and services selected in the Exceptions tab. Use this setting when you need to protect your client to the maximum extent.
  - **Off (Not recommended)** : Turning off the Windows Firewall may make your client and network more vulnerable to viruses and intruders.

## Configuring Utilities

### Local Drive

- **C Drive**  
The C drive is used for the system. If there is less than 3MB of free space available, the client OS cannot operate. Therefore, always ensure that there is a sufficient amount of free space available. EWF can help maintain available space by preventing the C drive being written to directly.
- **Saving Files**  
Your client uses a fixed size of flash memory. Therefore, it is better to save files to the server rather than to your client.

### Mapping a Network Drive

The administrator can map a folder to a network drive. To keep the mapping information after restarting the client, take note of these directions carefully.

- Select the Reconnect at logon checkbox in the Map Network Drive dialog box.
- If the EWF or FBWF is enabled, the changes are saved on the disk.

### Installing MUI (Multi-language User Interface)

The MUI Setup program helps you set up languages on the WES client. In addition, you can delete an original language pack to extend the available free disk space. If you want to change the default language, standards or formats, use the Regional Options in the Control Panel.

To add a language to your WES client, follow these steps:

- Log on as an administrator.
- If the EWF or FBWF is enabled, you must disable it before beginning the installation.



- Click **Start** and click **Run**. Type **muisetup.exe** in the Open box and click **OK**. A list of languages that can be installed is displayed as shown below. Log on as an administrator.
- Select the language you want to install and click Install from the File menu. The installation will begin. Log on as an administrator.



You can delete an original language pack using the **Delete** menu in the **File** menu.

This operation deletes the original language pack only and does not delete the copy installed on your WES Client.

## Recover the System

### Overview

The WES Client provides a recovery function which allows you to revert to a backed up system when encountering a serious problem. You can back up an OS image which is working normally to USB memory or the PXE server. You can revert to a backed up image when your client has one of these problems:

- When a system file is deleted accidentally or is corrupted
- When the client computer is unstable or there is a problem with a device driver
- When problems occur, after installing a new program or device
- When the client computer is infected with a virus
- When Windows Embedded Standard fails to start

### How to Recover the System

#### • Recovery Using USB Memory

By following these steps, you can save all necessary files to USB memory, and boot up with the backed up system on the USB memory and recover the system.

- Perform system formatting for your USB memory in order to make it bootable.
- Save the Windows Embedded Standard image and the Backup/Recovery Utility which will be recovered later to your USB memory.
- Boot up with the USB memory.
- Recover the system using the Windows Embedded Standard image and the Backup/Recovery Utility in the USB memory.

#### • Recovery Using Network Booting

This method is provided through the PXE (Preboot eXecution Environment) server. The PXE sever provides a client/server interface based on TCP/IP, DHCP, and TFTP. It allows an administrator at a remote location to configure and boot the operating system onto a client over a network.

- Implement a PXE server.
- Save the Windows Embedded Standard image and the Backup/Recovery Utility which will be recovered later onto the

PXE server.

- Boot the client via the network.
- Recover the system using the Windows Embedded Standard image and the Backup/Recovery Utility saved on the PXE server via the network.

 For more information, refer to the [PXE Server User Manual](#).

### What is Natural Color?

This software works only for Samsung products and enables adjusting the displayed colors on the product and matches the colors on the product with the colors of the printed pictures. For more information, refer to the online help of the software (F1).

The Natural Color is provided online. You can download it from the website below and install;

[http://www.samsung.com/us/consumer/learningresources/monitor/naturalcolorexpert/pop\\_download.html](http://www.samsung.com/us/consumer/learningresources/monitor/naturalcolorexpert/pop_download.html)

### What is MagicTune?




MagicTune is a software program that helps with monitor adjustments by providing comprehensive descriptions of monitor functions and easy-to-understand guidelines.


You can adjust the product with the mouse and the keyboard without using the operating buttons of the product.

### Installing the Software

1. Insert the installation CD into the CD-ROM drive.
2. Select the MagicTune setup program.

 If the pop-up screen for the software installation does not appear on the main screen, find and double-click the MagicTune setup file on the CD-ROM.

3. Select the installation language and click [Next].
4. Complete the remaining software installation steps according to the instructions displayed on the screen.

-  • The software may not work properly if you do not restart the computer after the installation.
- The MagicTune icon may not appear depending on the computer system and the product specifications.
- If the shortcut icon does not appear, press the F5 key.

### Restrictions and Problems with the Installation (MagicTune™)

The installation of MagicTune™ may be affected by the graphics card, motherboard and the networking environment.

### System Requirements

#### OS

- Windows XP, Windows Vista, Windows 7

### Removing the Software

You can only remove MagicTune™ through [Add or Remove Programs ] in Windows.

To remove MagicTune™, complete the following steps.

1. Click [Start] select [Settings], and select [Control Panel] from the menu.  
For Windows XP, click [Start], and select [Control Panel] from the menu.
2. Double-click the [Add or Remove Programs] icon in the Control Panel.
3. In the [Add/Remove] window, find and select MagicTune™ so that it is highlighted.
4. Click [Change or Remove Programs] to remove the software.
5. Select [Yes] to start removing MagicTune™.
6. Wait until a message box appears informing you that the software has been removed completely.

 For technical support, the FAQ (frequently asked questions) or information about the software upgrade for MagicTune™, please visit our website. (<http://www.samsung.com/>).


### What is MultiScreen?




MultiScreen enables users to use the monitor by partitioning multiple sections.

### Installing the Software

1. Insert the installation CD into the CD-ROM drive.
2. Select the MultiScreen setup program.

 If the pop-up screen for the software installation does not appear on the main screen, find and double-click the MultiScreen setup file on the CD-ROM.

3. When the Installation Wizard appears, click [Next].
4. Complete the remaining software installation steps according to the instructions displayed on the screen.

-  • The software may not work properly if you do not restart the computer after the installation.
- The MultiScreen icon may not appear depending on the computer system and the product specifications.
- If the shortcut icon does not appear, press the F5 key.

### Restrictions and Problems with the Installation (MultiScreen)

The MultiScreen installation may be affected by the graphics card, motherboard and the networking environment.

### Operating System

#### OS

- Windows 2000
- Windows XP Home Edition
- Windows XP Professional
- Windows Vista 32 Bit
- Windows 7 32 Bit

 For MultiScreen, the operating systems Windows 2000 or later is recommended.

#### Hardware

- At least 32MB of memory
- At least 60MB of free space on the hard disk drive

### Removing the Software

Click [Start], select [Settings]/[Control Panel], and then double-click [Add or Remove Programs].


Select MultiScreen from the program list and click the [Add/Delete] button.

# 5 Troubleshooting

---

## 5-1 Monitor Self-Diagnosis


---


-  • You can check if the product is working properly using the Self-Diagnosis function.
- If a blank screen is displayed and the Power LED blinks even if the product and the PC are properly connected, perform the self-diagnosis function according to the procedures below.

1. Turn the product and the PC off.
2. Separate the signal cable from the product.
3. Turn the product on.
4. If the product is working properly, the <Check Signal Cable> message appears.

In this case, if a blank screen is displayed again, make sure that there is no problem with the PC and the connection. The product is working properly.

## 5-2 Before Requesting Service

 Please check the following before requesting After-Sales service. If the problem continues, please contact your nearest Samsung Electronics Service Center.

A BLANK SCREEN APPEARS / I CANNOT TURN THE PRODUCT ON	
Is the power cord connected properly?	Check the connection status of the power cord.
Is the <Check Signal Cable> message displayed on the screen?	Check the cable connecting the PC and the product. If the message appears on the screen even if the cable is properly connected, recheck the input signal by pressing the  /SOURCE button of the product.
Is the <Not Optimum Mode> message displayed on the screen?	This occurs when the signal from the graphics card exceeds the maximum resolution or the maximum frequency of the product.  In this case, set up the appropriate resolution and the frequency for the product.
Is a blank screen displayed and does the power LED blink at a 1 second interval?	This occurs when the power saving function is running. If you click the mouse or press any key, the screen will be turned on.
THE IMAGE IS TOO LIGHT OT TOO DARK.	
Adjust the <Brightness> and <Contrast>. (Refer to the <Brightness> and <Contrast>.) If <MagicBright> is set to <Dynamic Contrast>, the display brightness can differ according to the input signal.	
THE ON SCREEN ADJUSTMENT MENU (OSD) DOES NOT APPEAR	
Did you cancel the screen adjustment?	Check if the <Key Lock Function> function is set to Off.
THE COLOR IS WEIRD / THE PICTURE IS DISPLAYED IN BLACK AND WHITE	
Is the entire screen displayed in the same color as if viewing the screen through a cellophane paper?	Check the cable connection to the computer. Reinsert the graphics card into the computer completely. Check if the <Color Effect> is set to <Off>.
Is the graphics card configured correctly?	Set up the graphics card referring to the user manual.
THE DISPLAY AREA SUDDENLY MOVES TO AN EDGE OR TO THE CENTER	
Did you change the graphics card or the driver?	Please press the [AUTO] button to run the auto adjustment function.
Did you change the resolution and frequency appropriate to the product?	Set the resolution and the frequency to the appropriate values in the graphics card Refer to the (Standard Signal Mode Table)
Is the graphics card configured correctly?	Set up the graphics card referring to the user manual.
THE PICTURES ARE OUT-OF-FOCUS.	
Did you change the resolution and the frequency appropriate to the product?	Set the resolution and the frequency to the appropriate values in the graphics card Refer to the (Standard Signal Mode Table)

**THE COLOR IS DISPLAYED IN 16 BIT (16 COLORS). THE COLOR HAS BEEN CHANGED AFTER CHANGING THE GRAPHICS CARD.**

Did you install the device driver for the product?	<p>Windows XP : Set the color again by selecting Control Panel → Appearance and Themes → Display → Settings.</p> <p>Windows ME/2000 : Set the color again by selecting Control Panel → Display → Settings.</p> <p>Windows Vista : Change the color settings by selecting Control Panel → Appearance and Personalization → Personalization → Display settings.</p> <p>Windows 7 : Change the color settings by selecting Control Panel → Appearance and Personalization → Display → Adjust resolution → Advanced settings → Monitor.</p> <p>(For more information, refer to the Windows user manual for the computer.)</p>
Is the graphics card configured correctly?	Configure the color again in accordance with the new graphics card driver.

**WHEN I CONNECT THE MONITOR, THE 'UNKNOWN MONITOR, PLUG&PLAY (VESA DDC) MONITOR FOUND' MESSAGE IS DISPLAYED.**

Did you install the device driver for the product?	Install the device driver referring to the descriptions about the driver installation.
Check if all the Plug&Play (VESA DDC) functions are supported referring to the User Manual of the graphics card.	Install the device driver referring to the descriptions about the driver installation.

**A "BEEP, BEEP" SOUND IS HEARD WHEN BOOTING THE COMPUTER.**

If the beep sound is generated 3 or more times when booting up the computer, please request service for the computer.

**PROBLEMS RELATED TO AUDIO**

No sound	<p>Ensure that the audio cable is firmly connected to both the audio-in port on your monitor and the audio-out port on your sound card.</p> <p>Check the volume level.</p>
Sound level is too low.	<p>Check the volume level.</p> <p>If the volume is still too low after turning the control to its maximum, check the volume control on the computer sound card or software program.</p>



FAQ!	PLEASE TRY THE FOLLOWING!
How can I change the frequency of the video signal?	<p>You have to change the frequency of the graphics card.</p> <p>Windows XP : Change the frequency by selecting Control Panel → Appearance and Themes → Display → Settings → Advanced → Monitor, and then change the refresh rate under Monitor Settings.</p> <p>Windows ME/2000 : Change the frequency by selecting Control Panel → Display → Settings → Advanced → Monitor, and then change the refresh rate under Monitor Settings.</p> <p>Windows Vista : Change the frequency by selecting Control Panel → Appearance and Personalization → Personalization → Resolution → Advanced settings → Monitor, and then change the refresh rate under Monitor Settings.</p> <p>Windows 7 : Change the frequency by selecting Control Panel → Appearance and Personalization → Display → Adjust screen resolution → Advanced settings → Monitor, and then change the refresh rate under Monitor Settings.</p> <p>(For more information, refer to the User Manual of the computer or the graphics card.)</p>
How can I change the resolution?	<p>Windows XP : Change the resolution by selecting Control Panel → Appearance and Themes → Display → Settings.</p> <p>Windows ME/2000 : Change the resolution by selecting Control Panel → Display → Settings.</p> <p>Windows Vista : Change the resolution by selecting Control Panel → Appearance and Personalization → Personalization → Resolution.</p> <p>Windows 7 : Change the resolution by selecting Control Panel → Appearance and Personalization → Display → Adjust screen resolution .</p> <p>(For more information, refer to the User Manual of the computer or the graphics card.)</p>
How can I use the power saving function?	<p>Windows XP : Configure it by selecting Control Panel → Appearance and Themes → Display → Screen Saver Setting or configure it in the BIOS Setup of the computer.</p> <p>Windows ME/2000 : Configure it by selecting Control Panel → Display → Screen Saver Setting or Configure it in the BIOS Setup of the computer.</p> <p>Windows Vista : Change settings by selecting Control Panel → Appearance and Personalization → Personalization → Screen Saver . You can also use the BIOS SETUP menu on the PC.</p> <p>Windows 7 : Change settings by selecting Control Panel → Appearance and Personalization → Personalization → Change screen saver . You can also use the BIOS SETUP menu on the PC.</p> <p>(For more information, refer to the Windows user manual for the computer.)</p>

## 6 More Information

### 6-1 Specifications

MODEL NAME		TC180
LCD Panel	Size	18.5 inches (47 cm)
	Display area	409.8 mm (H) x 230.4 mm (V) / 16.13 inches (H) x 9.07 inches (V)
	Pixel Pitch	0.300 mm (H) x 0.300 mm (V) / 0.012 inches (H) x 0.012 inches (V)
Synchronization	Horizontal	31 ~ 60 kHz
	Vertical	56 ~ 75 Hz
Display Color		16.7 M
Resolution	Optimum resolution	1366 x 768 @ 60 Hz
	Maximum resolution	1366 x 768 @ 60 Hz
Input Signal, Terminated		RGB Analog 0.7 Vp-p $\pm$ 5 % Separate H/V sync, Composite TTL Level (V high $\geq$ 2.0 V, V low $\leq$ 0.8 V)
Maximum Pixel Clock		85.5 MHz (Analog / Digital)
Power Supply		This product supports 100 – 240 V. Since the standard voltage may differ from country to country, please check the label on the back of the product
Signal connectors		15pin-to-15pin D-sub cable, Detachable
Dimensions (WxHxD) / Weight		443.4 x 334.8 x 197.0 mm (17.46 x 13.18 x 7.76 inches) / 5.1 Kg (11.24 lbs)
VESA Mounting Interface		100 mm x 100 mm / 3.94 inches x 3.94 inches
Environmental considerations	Operating	Temperature : 50 °F ~ 104 °F (10 °C ~ 40 °C) Humidity : 10 % ~ 80 %, non-condensing
	Storage	Temperature : -4 °F ~ 113 °F (-20 °C ~ 45 °C) Humidity : 5 % ~ 95 %, non-condensing

 Design and specifications are subject to change without prior notice.

 This device is a Class B digital apparatus.

(USA ONLY)

Dispose unwanted electronics through an approved recycler.  
To find the nearest recycling location, go to our website,  
[www.samsung.com/recyclingdirect](http://www.samsung.com/recyclingdirect), or call (877) 278 - 0799

## 6-2 Power Saving Function

This product provides a power saving function that automatically turns the screen off when the product is not used for a predetermined period of time to reduce power consumption. If the product enters power saving mode, the power LED turns to a different color to indicate that the product is in power saving mode.

When the product is in power saving mode, the power is not turned off and you can turn the screen on again by pressing any key or clicking the mouse. However, the power saving function only works when the product is connected to a computer that provides the power saving function.

STATE	NORMAL OPERATION	POWER SAVING MODE	POWER OFF (POWER SWITCH OFF)
Power Indicator	On	Blinking	Off
Power Consumption	30 watts	Less than 2.7 watts	0 watts

- If there is no power cut-off switch, the power consumption is "0" only when the power cord is disconnected.
- The actual power consumption may be different from the indicated power consumption above if the system conditions or settings are changed.

## 6-3 Contact SAMSUNG WORLDWIDE

 If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care center.

NORTH AMERICA		
U.S.A	1-800-SAMSUNG (726-7864)	<a href="http://www.samsung.com">http://www.samsung.com</a>
CANADA	1-800-SAMSUNG (726-7864)	<a href="http://www.samsung.com/ca">http://www.samsung.com/ca</a> <a href="http://www.samsung.com/ca_fr">http://www.samsung.com/ca_fr</a> (French)
MEXICO	01-800-SAMSUNG (726-7864)	<a href="http://www.samsung.com">http://www.samsung.com</a>
LATIN AMERICA		
ARGENTINA	0800-333-3733	<a href="http://www.samsung.com">http://www.samsung.com</a>
BRAZIL	0800-124-421 4004-0000	<a href="http://www.samsung.com">http://www.samsung.com</a>
BOLIVIA	800-10-7260	<a href="http://www.samsung.com">http://www.samsung.com</a>
CHILE	800-SAMSUNG (726-7864) From mobile 02-482 82 00	<a href="http://www.samsung.com">http://www.samsung.com</a>
COLOMBIA	01-8000112112	<a href="http://www.samsung.com">http://www.samsung.com</a>
COSTA RICA	0-800-507-7267	<a href="http://www.samsung.com">http://www.samsung.com</a>
DOMINICA	1-800-751-2676	<a href="http://www.samsung.com">http://www.samsung.com</a>
ECUADOR	1-800-10-7267	<a href="http://www.samsung.com">http://www.samsung.com</a>
EL SALVADOR	800-6225	<a href="http://www.samsung.com">http://www.samsung.com</a>
GUATEMALA	1-800-299-0013	<a href="http://www.samsung.com">http://www.samsung.com</a>
HONDURAS	800-27919267	<a href="http://www.samsung.com">http://www.samsung.com</a>
JAMAICA	1-800-234-7267	<a href="http://www.samsung.com">http://www.samsung.com</a>
NICARAGUA	00-1800-5077267	<a href="http://www.samsung.com">http://www.samsung.com</a>
PANAMA	800-7267	<a href="http://www.samsung.com">http://www.samsung.com</a>
PERU	0-800-777-08	<a href="http://www.samsung.com">http://www.samsung.com</a>
PUERTO RICO	1-800-682-3180	<a href="http://www.samsung.com">http://www.samsung.com</a>
TRINIDAD & TOBAGO	1-800-SAMSUNG (726-7864)	<a href="http://www.samsung.com">http://www.samsung.com</a>
VENEZUELA	0-800-100-5303	<a href="http://www.samsung.com">http://www.samsung.com</a>
EUROPE		
ALBANIA	42 27 5755	<a href="http://www.samsung.com">http://www.samsung.com</a>
AUSTRIA	0810 - SAMSUNG (7267864, € 0.07/min)	<a href="http://www.samsung.com">http://www.samsung.com</a>
BELGIUM	02-201-24-18	<a href="http://www.samsung.com/be">http://www.samsung.com/be</a> (Dutch) <a href="http://www.samsung.com/be_fr">http://www.samsung.com/be_fr</a> (French)
BOSNIA	05 133 1999	<a href="http://www.samsung.com">http://www.samsung.com</a>
BULGARIA	07001 33 11	<a href="http://www.samsung.com">http://www.samsung.com</a>
CROATIA	062 SAMSUNG (062 726 7864)	<a href="http://www.samsung.com">http://www.samsung.com</a>

EUROPE		
CZECH	800 - SAMSUNG (800-726786)	<a href="http://www.samsung.com">http://www.samsung.com</a>
	Samsung Electronics Czech and Slovak, s.r.o., Oasis Florenc, Sokolovská 394/17, 180 00, Praha 8	
DENMARK	70 70 19 70	<a href="http://www.samsung.com">http://www.samsung.com</a>
FINLAND	030 - 6227 515	<a href="http://www.samsung.com">http://www.samsung.com</a>
FRANCE	01 48 63 00 00	<a href="http://www.samsung.com">http://www.samsung.com</a>
GERMANY	01805 - SAMSUNG (726-7864, € 0,14/Min)	<a href="http://www.samsung.com">http://www.samsung.com</a>
CYPRUS	From landline : 8009 4000	<a href="http://www.samsung.com">http://www.samsung.com</a>
GREECE	From landline : 80111- SAMSUNG (7267864) From landline & mobile : (+30) 210 6897691	<a href="http://www.samsung.com">http://www.samsung.com</a>
HUNGARY	06-80-SAMSUNG (726-7864)	<a href="http://www.samsung.com">http://www.samsung.com</a>
ITALIA	800-SAMSUNG (726-7864)	<a href="http://www.samsung.com">http://www.samsung.com</a>
KOSOVO	+381 0113216899	<a href="http://www.samsung.com">http://www.samsung.com</a>
LUXEMBURG	261 03 710	<a href="http://www.samsung.com">http://www.samsung.com</a>
MACEDONIA	023 207 777	<a href="http://www.samsung.com">http://www.samsung.com</a>
MONTENEGRO	020 405 888	<a href="http://www.samsung.com">http://www.samsung.com</a>
NETHERLANDS	0900 - SAMSUNG (0900-7267864) (€ 0,10/Min)	<a href="http://www.samsung.com">http://www.samsung.com</a>
NORWAY	815-56 480	<a href="http://www.samsung.com">http://www.samsung.com</a>
POLAND	0 801-1SAMSUNG (172-678) +48 22 607-93-33	<a href="http://www.samsung.com">http://www.samsung.com</a>
PORTUGAL	808 20 - SAMSUNG (808 20 7267)	<a href="http://www.samsung.com">http://www.samsung.com</a>
RUMANIA	From landline : 08010- SAMSUNG (7267864) From landline & mobile : (+40) 21 206 01 10	<a href="http://www.samsung.com">http://www.samsung.com</a>
SERBIA	0700 Samsung (0700 726 7864)	<a href="http://www.samsung.com">http://www.samsung.com</a>
SLOVAKIA	0800 - SAMSUNG(0800-726 786)	<a href="http://www.samsung.com">http://www.samsung.com</a>
SPAIN	902 - 1 - SAMSUNG (902 172 678)	<a href="http://www.samsung.com">http://www.samsung.com</a>
SWEDEN	0771 726 7864 (SAMSUNG)	<a href="http://www.samsung.com">http://www.samsung.com</a>
SWITZERLAND	0848-SAMSUNG (7267864, CHF 0.08/min)	<a href="http://www.samsung.com/ch">http://www.samsung.com/ch</a> <a href="http://www.samsung.com/ch_fr">http://www.samsung.com/ch_fr</a> (French)
U.K	0330 SAMSUNG (7267864)	<a href="http://www.samsung.com">http://www.samsung.com</a>
EIRE	0818 717100	<a href="http://www.samsung.com">http://www.samsung.com</a>
LITHUANIA	8-800-77777	<a href="http://www.samsung.com">http://www.samsung.com</a>
LATVIA	8000-7267	<a href="http://www.samsung.com">http://www.samsung.com</a>
ESTONIA	800-7267	<a href="http://www.samsung.com">http://www.samsung.com</a>
TURKEY	444 77 11	<a href="http://www.samsung.com">http://www.samsung.com</a>

CIS		
RUSSIA	8-800-555-55-55	<a href="http://www.samsung.com">http://www.samsung.com</a>
GEORGIA	8-800-555-555	<a href="http://www.samsung.com">http://www.samsung.com</a>
ARMENIA	0-800-05-555	<a href="http://www.samsung.com">http://www.samsung.com</a>
AZERBAIJAN	088-55-55-555	<a href="http://www.samsung.com">http://www.samsung.com</a>
KAZAKHSTAN	8-10-800-500-55-500 (GSM: 7799)	<a href="http://www.samsung.com">http://www.samsung.com</a>
UZBEKISTAN	8-10-800-500-55-500	<a href="http://www.samsung.com">http://www.samsung.com</a>
KYRGYZSTAN	00-800-500-55-500	<a href="http://www.samsung.com">http://www.samsung.com</a>
TADJIKISTAN	8-10-800-500-55-500	<a href="http://www.samsung.com">http://www.samsung.com</a>
MONGOLIA		<a href="http://www.samsung.com">http://www.samsung.com</a>
UKRAINE	0-800-502-000	<a href="http://www.samsung.com/ua">http://www.samsung.com/ua</a> <a href="http://www.samsung.com/ua_ru">http://www.samsung.com/ua_ru</a>
BELARUS	810-800-500-55-500	<a href="http://www.samsung.com">http://www.samsung.com</a>
MOLDOVA	00-800-500-55-500	<a href="http://www.samsung.com">http://www.samsung.com</a>
ASIA PACIFIC		
AUSTRALIA	1300 362 603	<a href="http://www.samsung.com">http://www.samsung.com</a>
NEW ZEALAND	0800 SAMSUNG (0800 726 786)	<a href="http://www.samsung.com">http://www.samsung.com</a>
CHINA	400-810-5858	<a href="http://www.samsung.com">http://www.samsung.com</a>
HONG KONG	(852) 3698 - 4698	<a href="http://www.samsung.com/hk">http://www.samsung.com/hk</a> <a href="http://www.samsung.com/hk_en/">http://www.samsung.com/hk_en/</a>
INDIA	1800 1100 11 3030 8282 1800 3000 8282 1800 266 8282	<a href="http://www.samsung.com">http://www.samsung.com</a>
INDONESIA	0800-112-8888 021-5699-7777	<a href="http://www.samsung.com">http://www.samsung.com</a>
JAPAN	0120-327-527	<a href="http://www.samsung.com">http://www.samsung.com</a>
MALAYSIA	1800-88-9999	<a href="http://www.samsung.com">http://www.samsung.com</a>
PHILIPPINES	1-800-10-SAMSUNG (726-7864) for PLDT 1-800-3-SAMSUNG(726-7864) for Digitel 1-800-8-SAMSUNG(726-7864) for Globe 02-5805777	<a href="http://www.samsung.com">http://www.samsung.com</a>
SINGAPORE	1800-SAMSUNG (726-7864)	<a href="http://www.samsung.com">http://www.samsung.com</a>
THAILAND	1800-29-3232 02-689-3232	<a href="http://www.samsung.com">http://www.samsung.com</a>
TAIWAN	0800-329-999 0266-026-066	<a href="http://www.samsung.com">http://www.samsung.com</a>
VIETNAM	1 800 588 889	<a href="http://www.samsung.com">http://www.samsung.com</a>

MIDDLE EAST		
IRAN	021-8255	<a href="http://www.samsung.com">http://www.samsung.com</a>
OMAN	800-SAMSUNG (726-7864)	<a href="http://www.samsung.com">http://www.samsung.com</a>
KUWAIT	183-2255	<a href="http://www.samsung.com">http://www.samsung.com</a>
BAHRAIN	8000-4726	<a href="http://www.samsung.com">http://www.samsung.com</a>
EGYPT	08000-726786	<a href="http://www.samsung.com">http://www.samsung.com</a>
JORDAN	800-22273	<a href="http://www.samsung.com">http://www.samsung.com</a>
MOROCCO	080 100 2255	<a href="http://www.samsung.com">http://www.samsung.com</a>
SAUDI ARABIA	9200-21230	<a href="http://www.samsung.com">http://www.samsung.com</a>
U.A.E	800-SAMSUNG (726-7864)	<a href="http://www.samsung.com">http://www.samsung.com</a>
AFRICA		
CAMEROON	7095- 0077	<a href="http://www.samsung.com">http://www.samsung.com</a>
COTE D' IVOIRE	8000 0077	<a href="http://www.samsung.com">http://www.samsung.com</a>
GHANA	0800-10077 0302-200077	<a href="http://www.samsung.com">http://www.samsung.com</a>
KENYA	0800 724 000	<a href="http://www.samsung.com">http://www.samsung.com</a>
NIGERIA	0800-726-7864	<a href="http://www.samsung.com">http://www.samsung.com</a>
SENEGAL	800-00-0077	<a href="http://www.samsung.com">http://www.samsung.com</a>
SOUTH AFRICA	0860-SAMSUNG (726-7864)	<a href="http://www.samsung.com">http://www.samsung.com</a>
TANZANIA	0685 88 99 00	<a href="http://www.samsung.com">http://www.samsung.com</a>
UGANDA	0800 300 300	<a href="http://www.samsung.com">http://www.samsung.com</a>

## 6-4 Correct Disposal of This Product (Waste Electrical & Electronic Equipment)

---



**(Applicable in the European Union and other European countries with separate collection systems)**

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.